

CAUTION: FAUCET WITH SWITCH IS NOT TO BE USED IN A FLAMMABLE ENVIRONMENT. NOT TO BE USED WITH AC VOLTAGE. FAUCET MUST BE MOUNTED IN ACCORDANCE TO ALL APPLICABLE CODES.

PLEASE REFER TO INSTALLATION DRAWINGS WHEN FOLLOWING INSTRUCTIONS


FOR INSTALLATION WITH A MODEL 100 PUMP: (pump with no pressure switch)

1. Measure and drill a 3/4" hole in countertop.
(For Dual Hot/Cold faucet drill a 1-3/8" hole)
2. Slide black gasket, then the spacer over wires and onto unit. Test mount unit in hole.
3. Check to see if enough threads show to attach nut.
If not enough threads show, remove the spacer.
4. Slide nut over wires and tighten on threads.
A thread locking solution may be used to keep nut tight.
5. Attach one faucet switch wire to the positive wire of the pump.
6. Attach the other wire to the positive side of the 12 VDC source.
7. A fuse rated for the pump should be installed in the line.
8. Attach negative wire of pump to ground or negative terminal.
9. Install 3/8" inner dia. tubing from pump outlet to faucet inlet.
Use proper sized tubing clamp.
Model 100 pump must have flooded inlet from tank..

FOR INSTALLATION WITH A SHURflo DEMAND PUMP:

Follow instructions above for mounting the fixture, noting the following:
Faucet unit may not have wires. Do Not Attach Faucet Switch Wires.
For pump installation refer to pump installation instructions.

TYPICAL INSTALLATION WITH SHURflo PUMP MODEL 100-009-21

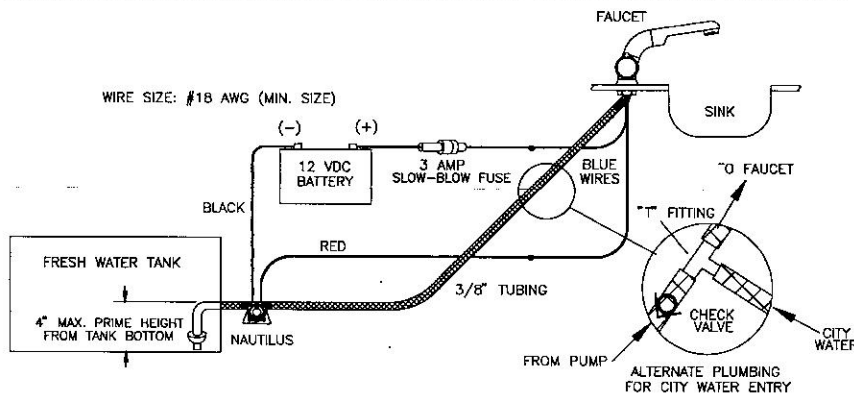

FEATURES & SPECIFICATIONS

- Liquid Temperatures to 176° F
- Pressures to 87 psi
- Integral Switch Rated at 3 amps @ 12 VDC
- Faucet Rotates for a variety of tasks
- Model 100 Pump Max. Temp. 120°F
- Model 100 Pump Max. Pressure 12 psi
- c-UL Listed

TIPS

Symptom

Switch does not turn on

Pump runs but no water comes out



Look For

Power turned off, blown fuse, low battery, bad wiring, bad switch **Check Voltage at Pump and Switch**

Empty water tank, kinked or clogged inlet hoses, inlet hose not tight or out of water, pump burnt out **Pour Water into Inlet of the pump, Check Hoses**

LIMITED WARRANTY

SHURflo warrants its Faucet/Pump to be free of defects in material and workmanship under normal use, for a period of one (1) year from the date of manufacture, or one (1) year of use, with proof of purchase. This limited warranty will not exceed two (2) years, in any event. Please contact SHURflo for a full copy of this limited warranty.

SHURflo reserves the right to update specifications, prices, or make substitutions.



SHURflo, LLC Headquarters

5900 Katella Avenue
Cypress, California 90630
Phone (562) 795-5200 • Toll Free (800) 854-3218
Fax (562) 795-7564

SHURflo, LLC East

52748 Park Six Court
Elkhart, Indiana 46514-5427
Phone (562) 795-5200 • Toll Free (800) 854-3218
Fax (574) 264-2169

SHURflo Europe, Middle East, Africa

Pentair Water Belgium bvba,
Industriepark Wolfstee, Toekomstlaan 30
B-2200 Herentals, Belgium
Phone +32-14-283500 • Fax +32-14-283505

© 2008 SHURflo, LLC All Rights Reserved