




ROCKET LAUNCHER Assembly Instructions


1

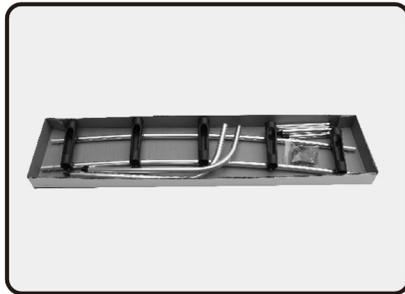

Remove All Pieces From Box



2

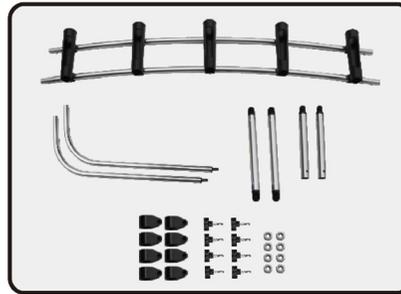

Lay Pieces Out




3



Attach Side Mounting Pieces


4

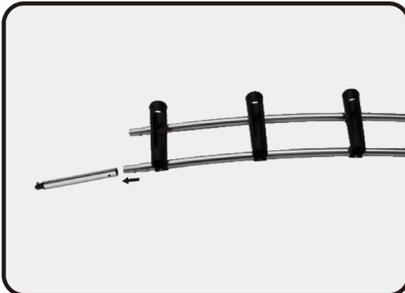

Attach Short Side Mounting Pole On Both Sides



5

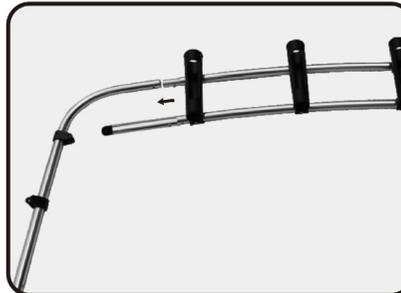

Attach Long Side Mounting Pole On Both Sides



6



Attach Poles Together At Top Mounting Point


7



Attach Front Mounting Pole On Bottom Mounting Point



8

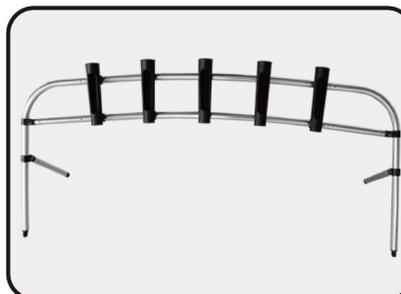

Rocket Launcher Piece Finished Assembly



9




Attach Rocket Launcher To Boat Bimini Top

You can adjust the mounting width of rocket launcher by fix different connection point.

1. The rocket launcher is installed on bimini top support poles.

Measure the width of bimini top canvas width.

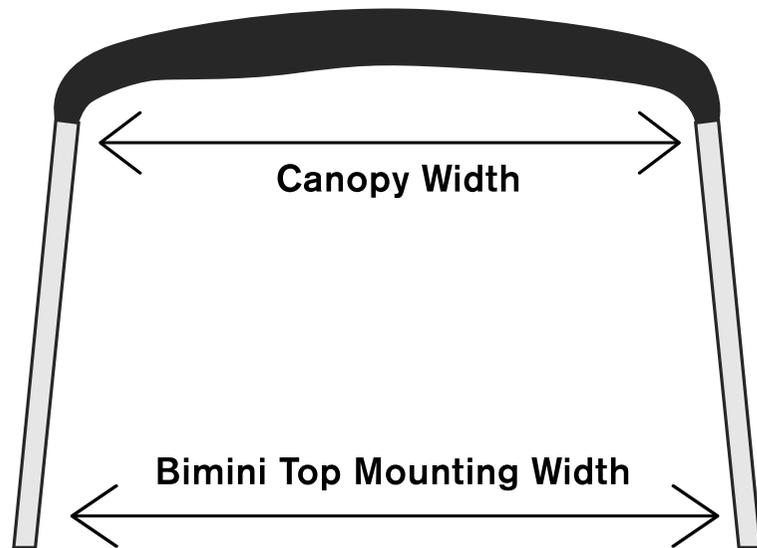

2. Install the rocket launcher based on mounting width

Item No	Mounting width	Fix point A1 to B1	Fix point A2 to B2
5ORL140-170	140-170cm	Fit 140cm canvas width	Fit 150-170cm canvas width
5ORL160-190	160-190cm	Fit 160cm canvas width	Fit 170-190cm canvas width
5ORL180-210	180-210cm	Fit 180cm canvas width	Fit 190-210cm canvas width
5ORL200-230	200-230cm	Fit 200cm canvas width	Fit 210-230cm canvas width

