
MAJESTIC[®]

Model: MJSGT220
USER'S MANUAL



Read this manual carefully and retain for future reference

CONTENTS

1. Safety instructions	3
2. Accessories	5
3. Controls and connections	5
3.1 Front view/side view	5
3.2 Rear View	6
3.3 Remote Control	7
4. System Connections	10
4.1 Connecting to Power Supply	10
4.2 Connection to External AV Signal Source	10
4.3 Connecting to External AV Signal Source(Y/Pb/Pr)	11
4.4 Connecting to External AV Signal Source (HDMI).....	11
5. TV OPERATION AND SYSTEM SETUP	12
5.1 Picture Menu	15
5.2 Sound Menu	17
5.3 Timer Menu	19
5.4 System Lock	200
5.5 Setting Menu	21
5.6 Channel Menu	22
5.7 Quick Menu	27
6. Home	28
6.1 Apps.....	28
6.2 Home	29
6.3 Media Operation.....	30
6.3.1 Photo.....	30
6.3.2 Music	32
6.3.3 Video	33
6.3.4 Applications.....	35
6.4 Setting	35
6.4.1 Network Setting.....	35
6.4.2 Time Setting	37
6.4.3 Common	37
6.4.4 About TV.....	40
7. Troubleshooting	41

1. Safety instructions

Welcome

Congratulations! You now own one of the most state of the art and technologically advanced high definition Television products available. In order to make set-up as easy as possible, we would like to familiarize you with the features and functions of this special product. Please read this user's manual carefully and thoroughly and keep in a safe place for future reference.

We thank you for your business and hope you enjoy this product.

Caution

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol is intended to alert the user to the presence of uninsurable "dangerous Voltage" within the Product's enclosure that may be of

Sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the

Literature accompanying the appliance.

CAUTION
-TO PREVENT DAIMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD
-DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
-SHOCK HAZARD DO NOT OPEN

CAUTION
These servicing instructions are Use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instruction unless you are qualified to

CAUTION
The stand intended for use only with this TV. Use with other apparatus is capable of resulting in instability causing possible injury.

WARNING
-Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

WARNING
-Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

FCC NOTICE
This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in home environment as well as in a commercial, industrial or business environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on circuit's different form that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or Modification not expressly approved by the party for compliance could void the user's authority to operate the equipment.
Connecting of peripherals requires the use of grounded shielded signal cables.

Important Safety Precautions

Always be careful when using your television. To reduce the risk of fire, electrical shocks, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Television.

- λ Read these instructions and keep them in a safe place.
- λ Heed all warnings.
- λ Follow all instructions.
- λ Do not use this apparatus near water.
- λ Do not block any of the ventilation openings.
- λ Install it in accordance with the manufacturer's instructions.
- λ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- λ Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- λ Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the Television.
- λ Only use the attachments/accessories specified by the manufacturer.
- λ Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the Television. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- λ Unplug this Television during lightning storms or when unused for long periods of time.
- λ Refer all servicing to qualified service personnel. Servicing is required when the Television has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the Television has been exposed to rain or moisture, does not operate normally, or has been dropped.
- λ Clean only with a lint free cloth.



2. Accessories



3. Controls and connections

3.1 Front view/side view



ON/OFF LED IR

ON is indicated by GREEN LED
OFF (standby) is indicated by RED LED

The functions of the TV buttons are described below.

- ▲ Ejects the CD / DVD.
- ▶|| Play / pause in CD / DVD mode.

 
VOL +/-: Press to adjust the volume.

CH +/-: Press to scan through channels.


INPUT: Press to display the input source menu.

MENU: Press to display the OSD menu, press again to exit the menu.

POWER: Turn on/off the TV set.

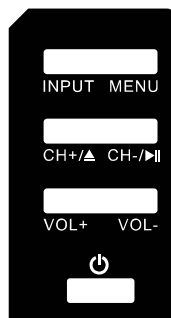

 3.2 Rear View

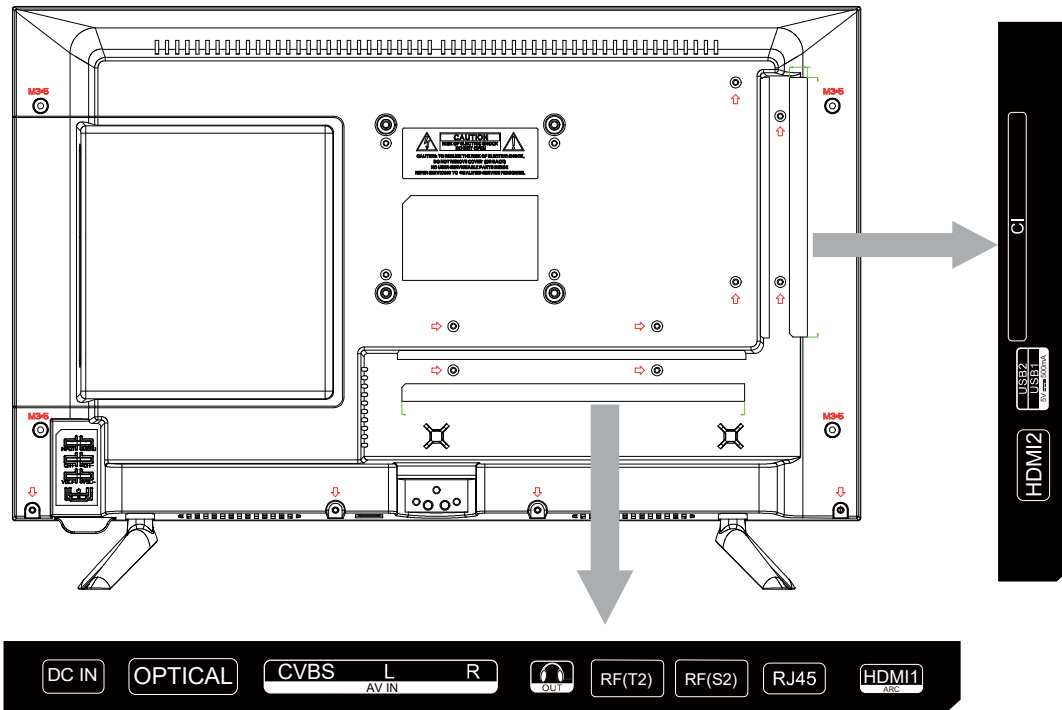

- DC IN:** Power cord connection/power supply
- OPTICAL:** Connect to the Optical Audio in port of an audio device
- AV IN:** Connects to the Audio out and composite Video out of an AV device (L / R / V).
- Headphones:** Connection for headphones/external speakers (3.5 mm jack)
- DVB-S2:** Satellite antenna connection
- DVB-C/T2:** Connection for DVB-T/DVB-T2 HD or cable television
- RJ45:** Network connection to the router for the Internet connection
- HDMI:** HDMI connection
- USB:** USB connection
- CI:** CI-slot for encrypted programmes (NOTE: insert the right way round)

3.3 Remote Control



[POWER]

Turns the TV on (standby) and off.

[SLEEP]

Set the sleep timer.

[P.MODE]

Select the different picture mode directly.

[NUMBER(0-9)]

Press these buttons to enter different channels.

[RECALL]

Switch back and front between the current and previous channels.

[SUBTITLE]

Select subtitle language.

[MUTE]

Switches the sound on or off.

[▲/▼/◀/▶/OK]

Allow you to navigate the on-screen menus and adjust the system settings to your preference.

[VOL+/VOL-]

Adjust the volume

[HOME]

Press the button to back to the home page screen.

[REC]

Press to record the program immediately.

[GOTO]

Jump to a specific time on a DVD/ VCD /MP3/WMA or CD

[PVR.List]

Display the recording list.(used only in DTV mode)

[S.PAGE]

Display a sub-page of upper options.

[▶||]

▶|| : Press this button to Play or Pause.

[◀◀ ▶▶]

Play fast backward/forward.(Media)

[HOLD]

HOLD On or Off the current page display in Teletext mode.

[REVEAL]

Reveal or Hide the hidden words.

[◀◀ ▶▶]

Play previous/next media file.(media)

[INPUT]

INPUT mode conversion button.

[NICAM]

TV Nicam select.

[S.MODE]

Select the different sound mode directly.

[-/--]

Press to change the channel bit.

[DEL]

Delete button.

[EPG]

Press to display EPG information(Electronic Program Guide).

[INFO]

The button is used to display current channel information.

[MENU]

Display the OSD menu(on screen display).

[EXIT]

Press EXIT to exit menu of sub menu.

[CH+/CH-]

Change the channel.

[MOUSE]

Press this button to activate mouse function.

[FAV]

Favourite program channel button.

[T.SHIFT]

Press the button to pause current DTV program and start recording.

[ZOOM]

This button is used to set display window

[TTX]

Press to turn the teletext On and Off.

[TV/RADIO]

Press to switch between DTV and radio programs.

[■]

Stop the disc.

[SIZE]

Change the size of display in Teletext mode.

[INDEX]

Press to return to the index/initial page.

Angle

Adjust angle in DVD mode

LANGUAGE

Change language in DVD mode

D.SETUP

 
DVD mode setup

D.MENU

Menu buttons in DVD mode

2. 4G AIR MOUSE REMOTE CONTROL

1. Product diagram

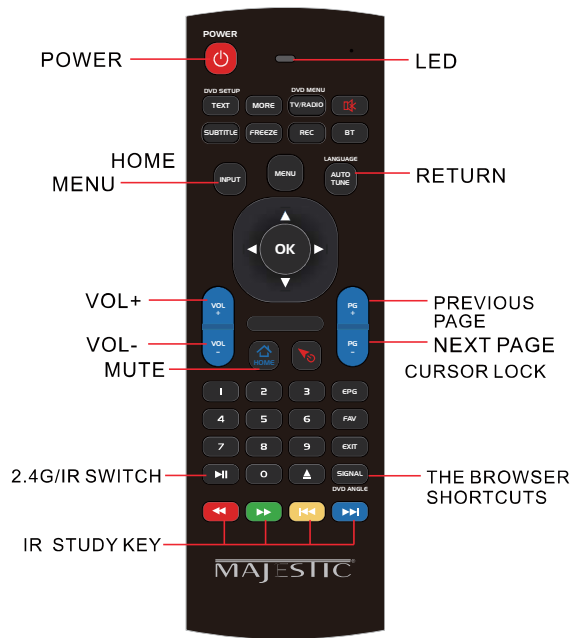

2. Instructions

(1)Pairing: Press the OK button and TV button at the same time after you have insert USB receiver into the USB port , the cursor can move swimmingly means the pairing is succeeded.

Angle

Adjust angle in DVD mode

LANG

Change language in DVD mode

D.SETUP

DVD mode setup

D.MENU

Menu buttons in DVD mode

(2)Function of the key

HOME: After entering the sub-menu you can back to the original main menu directly.

RETURN:You can press the Return key to put the unit into last interface.

CURSOR LOCK:Short press to lock the cursor, and then return the cursor state.

THE BROWSER SHORTCUTS:A key to open the browser

3.Illustrated of the work status

(1)After the air mouse having paired to the terminal equipment, as the key pressed LED light shine,loosen the finger then light go out.

(2)Cursor speed regulation

From slow to fast: Press "HOME" and "VOL+" at the same time, the speed of cursor pointer is faster

From fast to slow: Press "HOME" and "VOL-" at the same time ,the speed of cursor pointer is slower

(3)IR learning function: Example for learning the TV "POWER" key

①Long press the TV button ,LED light will from fast flashing to slow flashing First, the smart RC enter IR learning mode.

②After the flying squirrel and a TV remote control have been infrared transmitter aligned, press the POWER button of the TV control,then LED of the air mouse will light,indicating that the air mouse has receive the code value that from TV remote control.

③Click the key of the air mouse that need to learn, the LED light becomes slow flashing, which means that the TV remote cotrol air mouse has received the code values.

④After the success of learning, you can press TV button to exit the learning mode, and then LED stop to light.

4. Instructions of the Keyboard Operating



The keyboard composed by the 38 keys.

Backspace:Delete previous character

CAPS:Caps Lock

ENTER:Confirm the operation

SPACE:Spacebar

ALT:Numeric characters switch

5. Specification

Transmission and control:2.4G RF wireless
radio-frequency technique

The sensor:3-Gyro + 3-Gsensor

The key number:81 keys

Remote control distance : ≥ 10 meter

The battery type: Two 7 batteries (AAA*2)

The machine power consumption:Less than
10mA in the work condition

Standby power consumption: in line with the European
"energy star" green environmental protection standard

Material:Rubber and silicone

Appearance of the color:Black

Dimension:172*52*19MM(two sides just 10mm thick)

 
The machine weight: About 100g

4. System Connections

Do not connect the power cord until all other connections have been made.
Ensure that you observe the color cord when connecting audio and video cables.

4.1 Connecting to Power Supply

1. Connect the power cord correctly as shown.
2. Press the POWER switch of your LCD TV to switch on the LCD TV. The power indicator on the front panel lights up in Green.

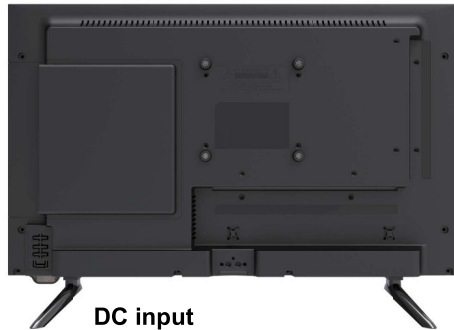


4.2 Connection to External AV Signal Source

Use the audio and video cable to connect the input jacks on the rear panel of the unit to the external AV signal source.

Connect the unit and the external AV signal source to the respective jacks with the S-Video cable.

 Ensure that you observe the color cord when connecting audio and video cables.

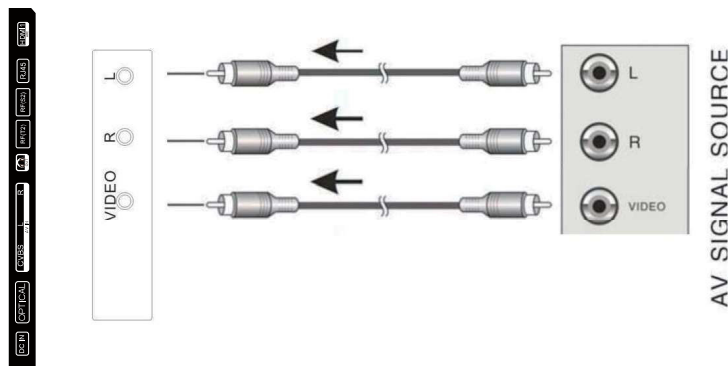


After connection, turn on the power of the unit and the external AV signal source. Press **SOURCE** then direction buttons to select AV mode, and then press the **ENTER** button to confirm.

The L/R audio input jacks can be used in the both Composite modes.

4.3 Connecting to External AV Signal Source (HDMI)

 Follow the figure below to connect an HDMI signal source to the HDMI jack on the rear panel of the unit.

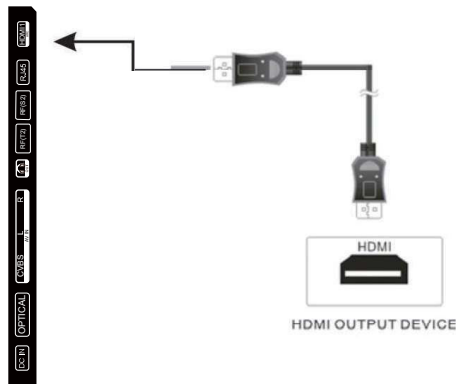


After connection, turn on the power of the unit and the external AV signal source and use the SOURCE and the direction buttons to select HDMI mode, and then press the ENTER button to confirm.



HDMI provides both audio and video signals and typically provides superior image quality to component or composite.

4.4 Connecting to T2/S2

 Connect the TV T2/S2 cable (the antenna cable, for example) to the antenna input jack on the back of the unit so that you can receive television programmers.

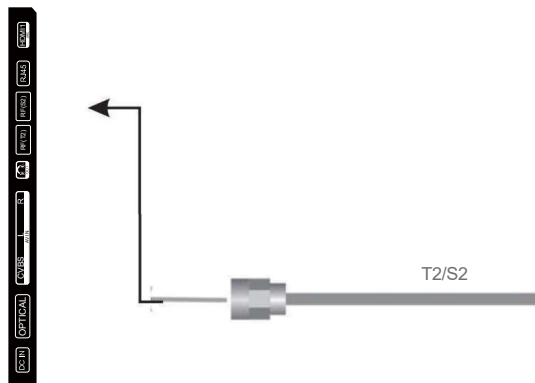

After connection, turn on the power of unit. Then press the SOURCE button to select ATV or DTV mode and conduct program selection.

 
5. TV OPERATION AND SYSTEM SETUP

SELECT TV Tuner


Please ensure to select correct TV Tuner for your region

- i. ATSC for North America, South Korea
- ii. ISDB for South America, Japan, Philippines
- iii. DVB-T for Rest of the world


Press ◀/▶ button to select **Setting** in the main Menu, and then press **ENTER** button to enter.

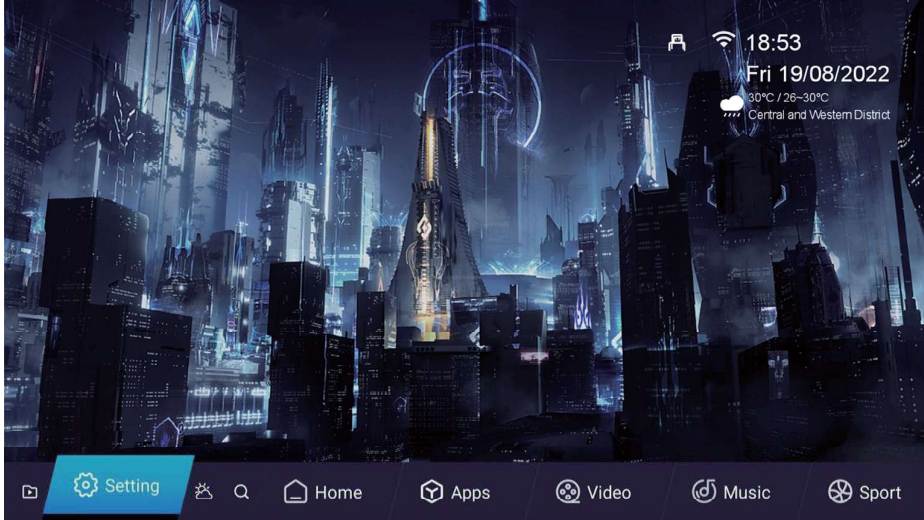

 Press ◀/▶ button to select **Common** in the Settings, and then press **ENTER** button to enter.

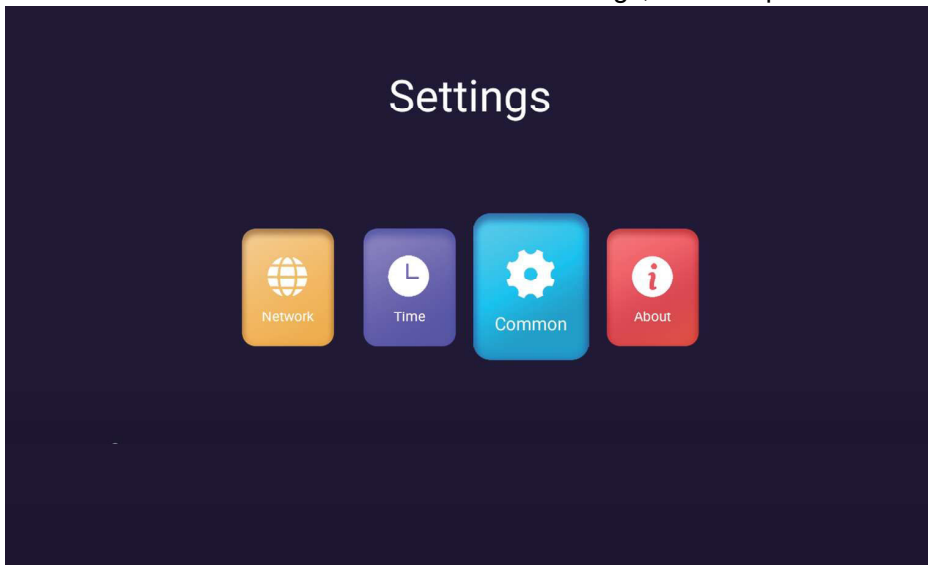

 
Press ▲/▼ button to select **TV System** in the Common, and then press **ENTER** button to enter.

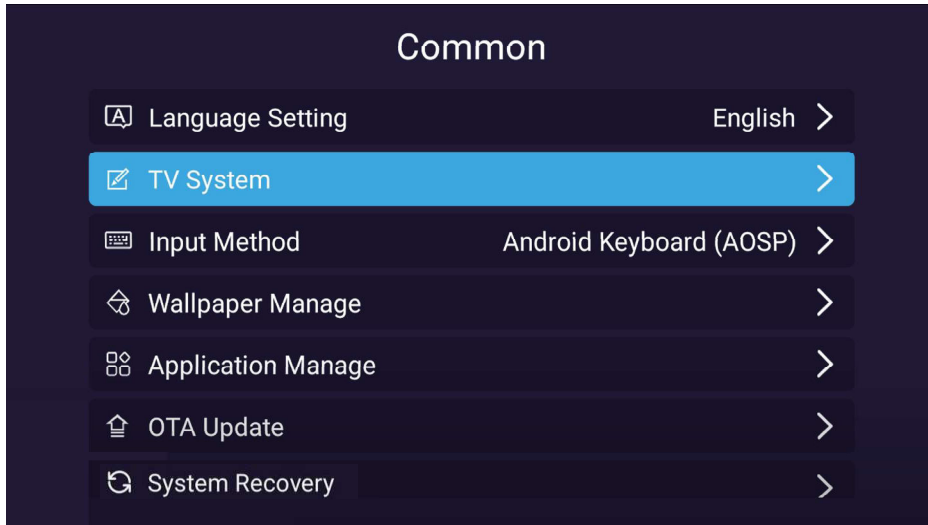

Press ▲/▼ button to select TV Tuner for your region, and then press **ENTER** button to enter.



 Press ◀/▶ button to select CONFIRM, finally press **ENTER** button. It is okay.

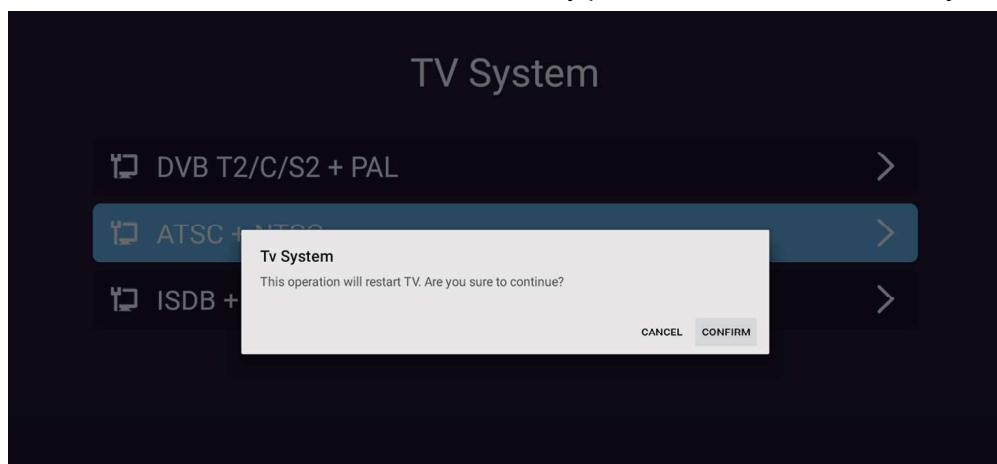


SELECT INPUT SOURCE

Press **SOURCE** button to display the input source input list;
Press ▲/▼ button to select the input source you want to watch;
Press **ENTER** button to enter the input source;



After entering the source for example DTV:

 - Press **MENU** button to display the MAIN OSD MENU;
- Press ▲/▼ button to select the MENU you want;
- Press **ENTER** button to enter the sub menu, and press **EXIT** button to return back to the previous menu.
- Press ▲/▼ button to select the option and then press **ENTER** button or ► button to enter the submenu, press ◀/▶ button to adjust the value or press ◀/▶ button to select in the sub menu;
- You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

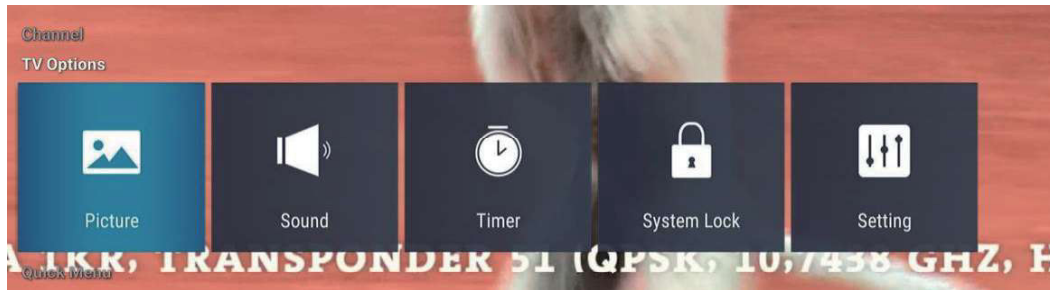

Press **INFO** button on the remote control to display program information.

1. Current program Number.
2. The NICAM mode of current program.
3. The sound system of current channel could be changed on **Analog Manual Search** Menu.



5.1 Picture Menu

 
The picture is for a reference only; the actual item is the standard.

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **Picture** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.

3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

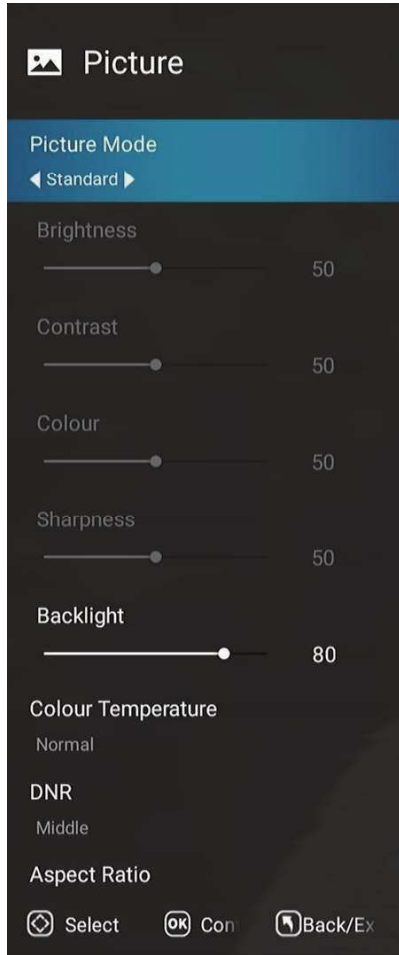


5.1.1 Picture Mode

Press **▲/▼** button to select **Picture Mode**, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User, Standard, Dynamic Mild)

You only can change the value of brightness, contrast, sharpness, color, when the picture is in User mode.

 TIPS: You can press **◀/▶** button on the remoter control again and again to change the picture mode directly.

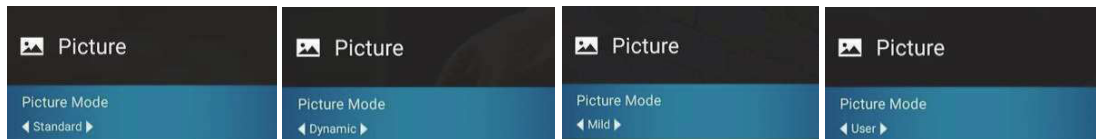

5.1.2 Balance

Press **▲/▼** button to select **Backlight** press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.3 Color Temperature

Press **▲/▼** button to select **Color Temperature**, then press **ENTER** button to enter and **◀/▶** button to select Standard, Cool, Warm.

5.1.4 Transparent

Press ▲/▼ button to select **Transparent**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.5 DNR

Press ▲/▼ button to select **DNR**, and then press **ENTER** button to enter and ◀/▶ button to select Off, Low, Middle, High.

5.1.6 Aspect Ratio

Press ▲/▼ button to select **Aspect Ratio**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

 
5.2 Sound Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press ▲/▼ button to select **Sound** in the main menu, and then press **ENTER** button or ▶ button to enter.

1. Press ▲/▼ button to select the option that you want to adjust in the Sound menu, then press **ENTER** button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ to select, and press **ENTER** button to select sub-menu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

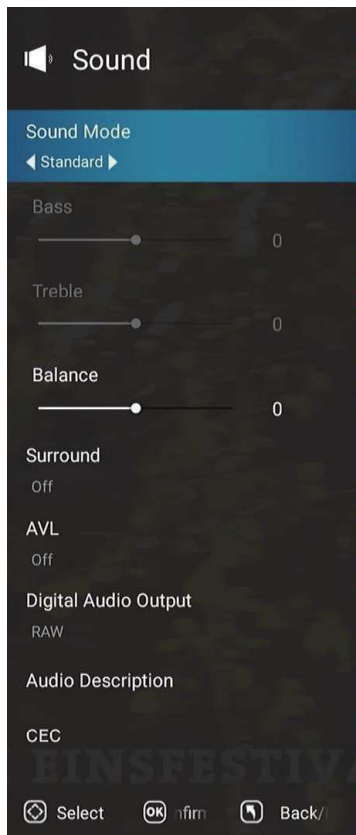


5.2.1 Sound mode

Press ▲/▼ button to select **Sound mode**, and then press **ENTER** button to enter. And then press ◀/▶ button to select. (Available Sound mode: User, Standard, Music, cinema). You can change the value of bass and treble, Balance and EQ, when the sound is in User mode.

TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.

 5.2.2 Balance

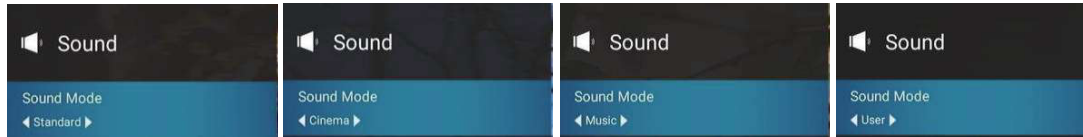

Press ▲/▼ button to select **Balance**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.3 Surround

Press ▲/▼ button to select surround, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.4 AVL

Press ▲/▼ button to select **AVL**, then press **ENTER** button to enter and press ◀/▶ button to adjust. It can only be adjusted under user mode then press **MENU** button to return back the previous menu directly.

5.2.5 Digital Audio output

 
Press ▲/▼ button to select **SPDIF Output**, then press **ENTER** button to enter and press ◀/▶ button to select.

(Available SPDIF mode: RAW, PCM, OFF)

Then press **ENTER** button or ▶ button to enter and press ◀/▶ button to adjust, then press **MENU** button to return back the previous menu directly.

5.2.6 Audio Description

Press ▲/▼ button to select AVL, then press **ENTER** button to enter you can press ◀/▶ button to open audio description then you can press ◀/▶ button to adjust Mixing Level.

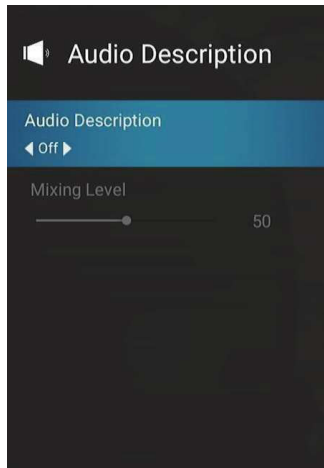

5.2.6 CEC

5.2.6.1 HDMI CEC Setup

5.2.6.2 Device Auto Power Off

 
5.2.6.3 TV Auto Power On

5.2.6.4 CEC device List

5.2.6.5 Amplifier Support ARC

5.2.6.6 Speaker Preference

Press ▲/▼ button to select **CEC**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

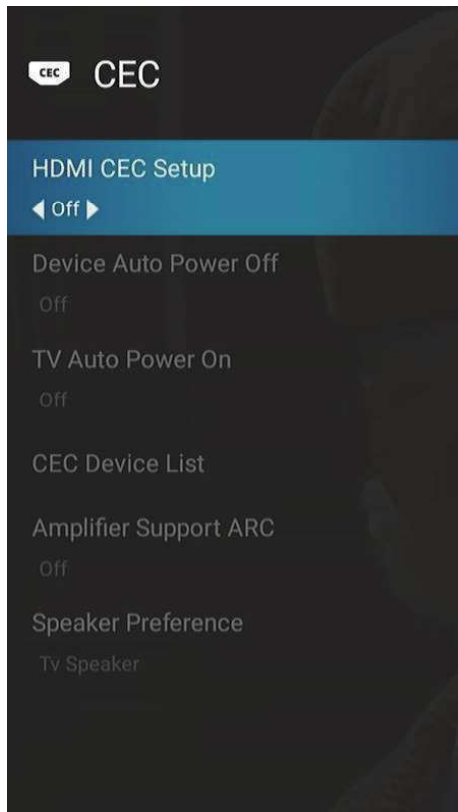


5.3 Timer Menu

5.3.1 OSD Timer

5.3.2 Sleep Timer

5.3.3 Auto Power Down

 Press ▲/▼ button to select **Timer**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

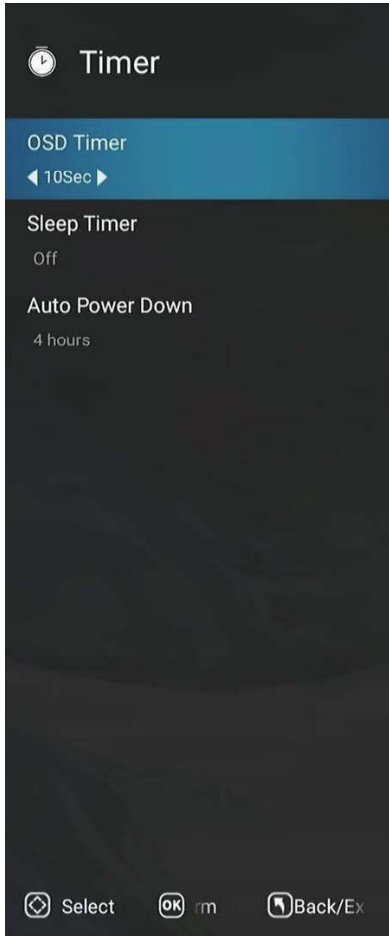

5.4 System lock

5.4.1 System Lock

 
5.4.2 Source Lock

 
5.4.3 Channel Lock

5.4.4 Program Restrictions

5.4.5 Change PIN

Press ▲/▼ button to select **System Lock**, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

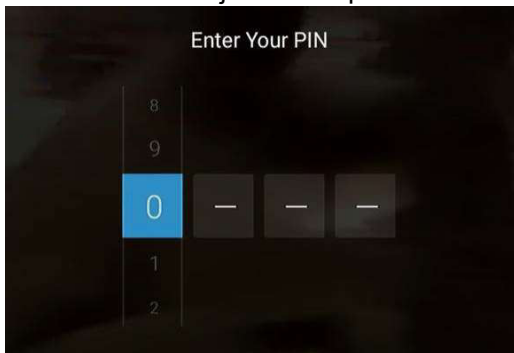

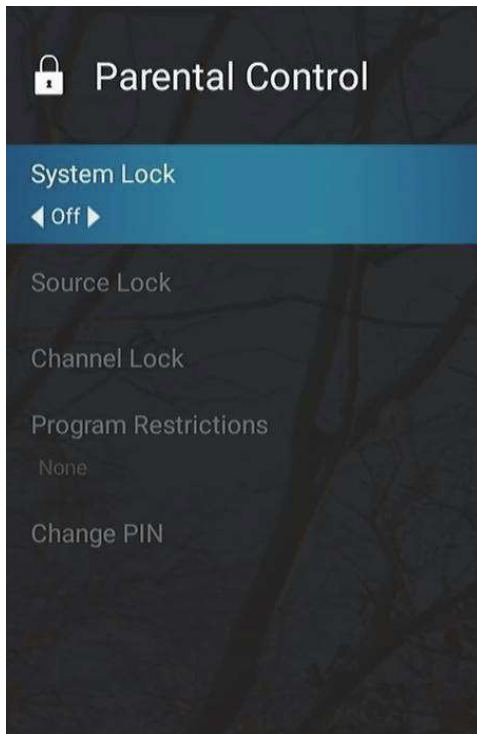


5.5 Setting Menu


The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

  1. Press **▲/▼** button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press **◀/▶** button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

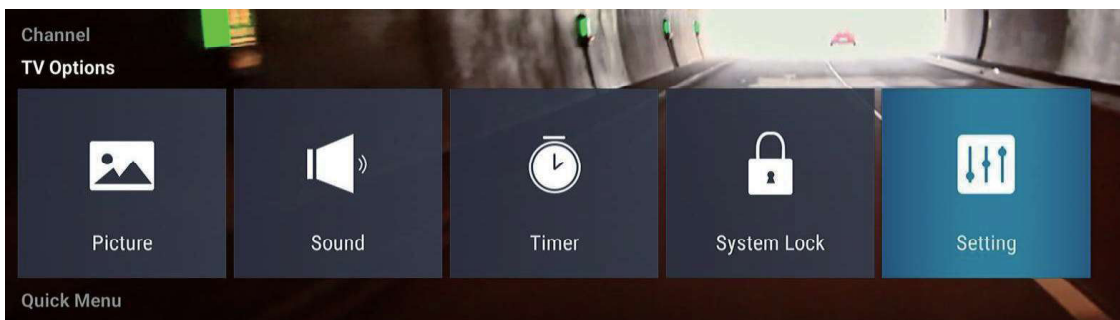

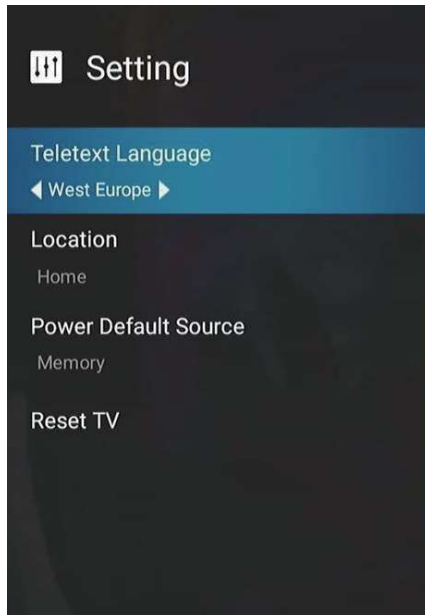

5.5.1 Teletext Language

Press ▲/▼ button to select **Teletext Language**, and then press ◀/▶ to select teletext language

5.5.2 Location

Press ▲/▼ button to select **Location**, and then press ◀/▶ to select.

5.5.3 Power Default Source

Press ▲/▼ button to select **Power Default Source**, and then press ◀/▶ to select on or Off.

5.5.4 Reset TV

 
Press ▲/▼ button to select **Reset TV**, and then press **ENTER** button to enter

5.6 Channel Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.


Press ▲/▼ button to select setup in the main menu, then press **ENTER** to enter.

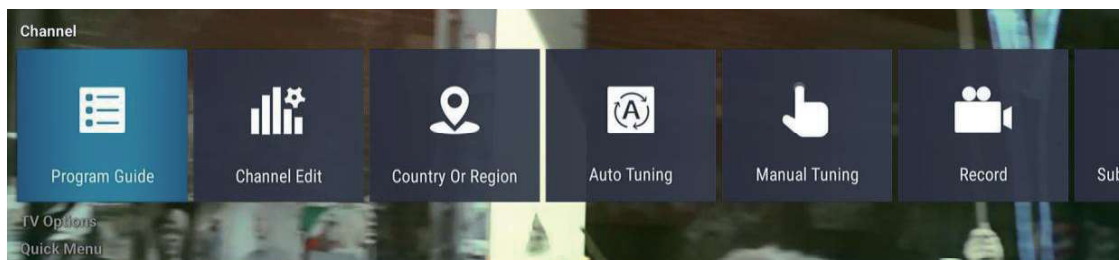

1. Press ▲/▼ button to select the option that you want to adjust in the **Channel** menu, then press **ENTER** or ▶ button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu

5.7.1 Program Guide

 1. In the DTV source you can start channel information function by pressing **Program Guide** Button on the remote control.. The prompt window will appear as follows:

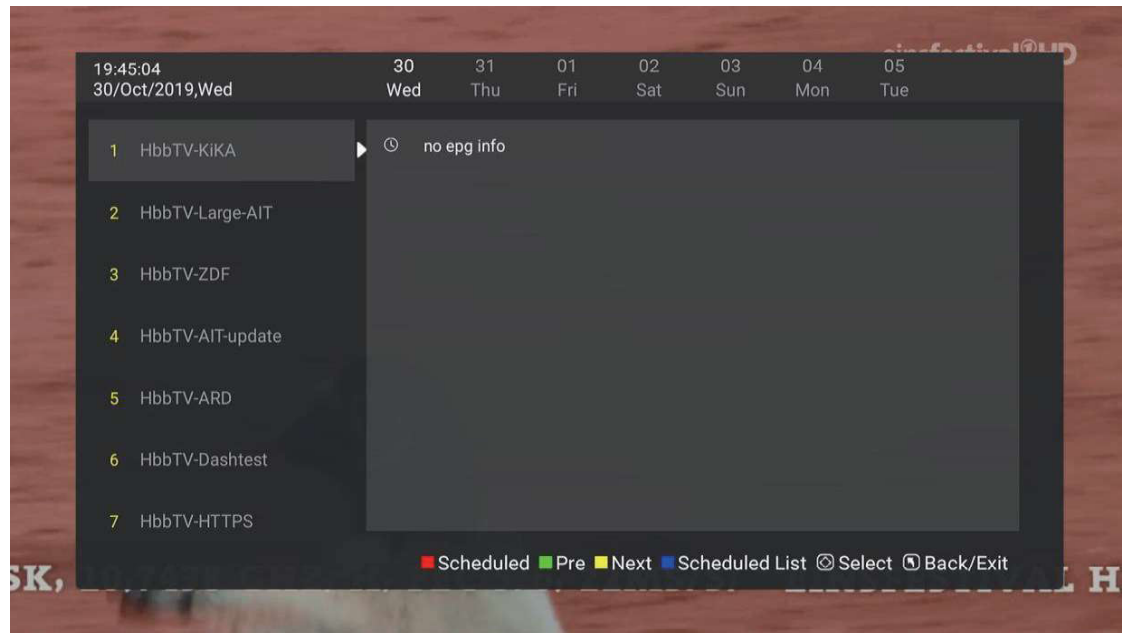


5.7.2 Channel Edit

Press **◀/▶** button to select **Channel Edit**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:




5.7.3 Country or Region

 Press ◀/▶ button to select **Channel Edit**, and then press **ENTER** button to the country or region selected. The menu will appear as follows:

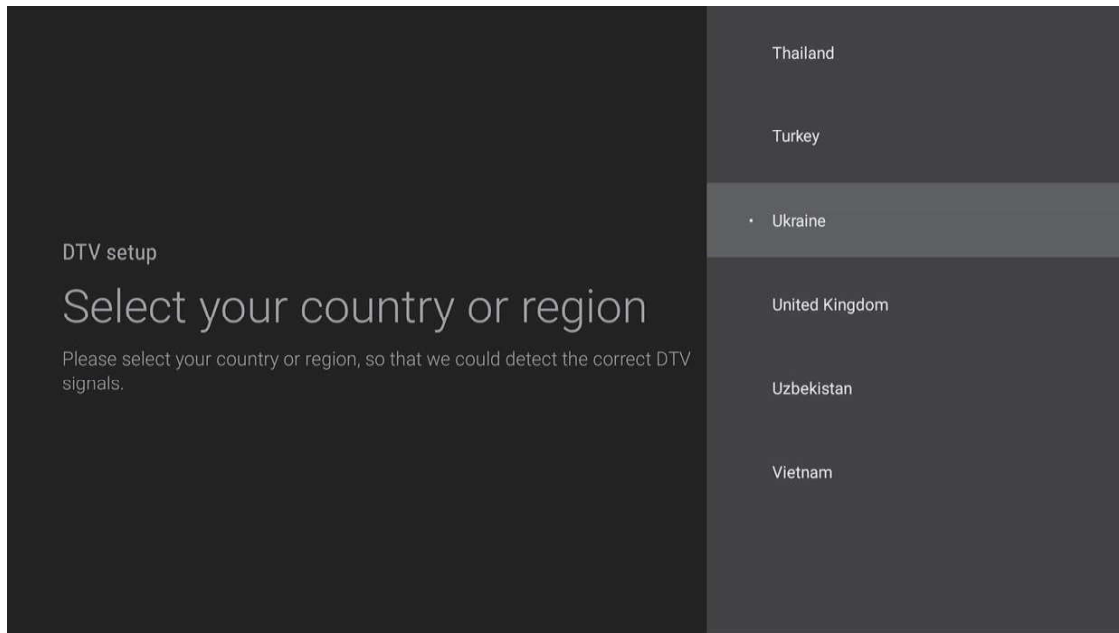


5.7.4 Auto Tuning

 Press ◀/▶ button to select **Auto Search**, and then press **ENTER** button to enter Select OK to search the menu will appear as follows:

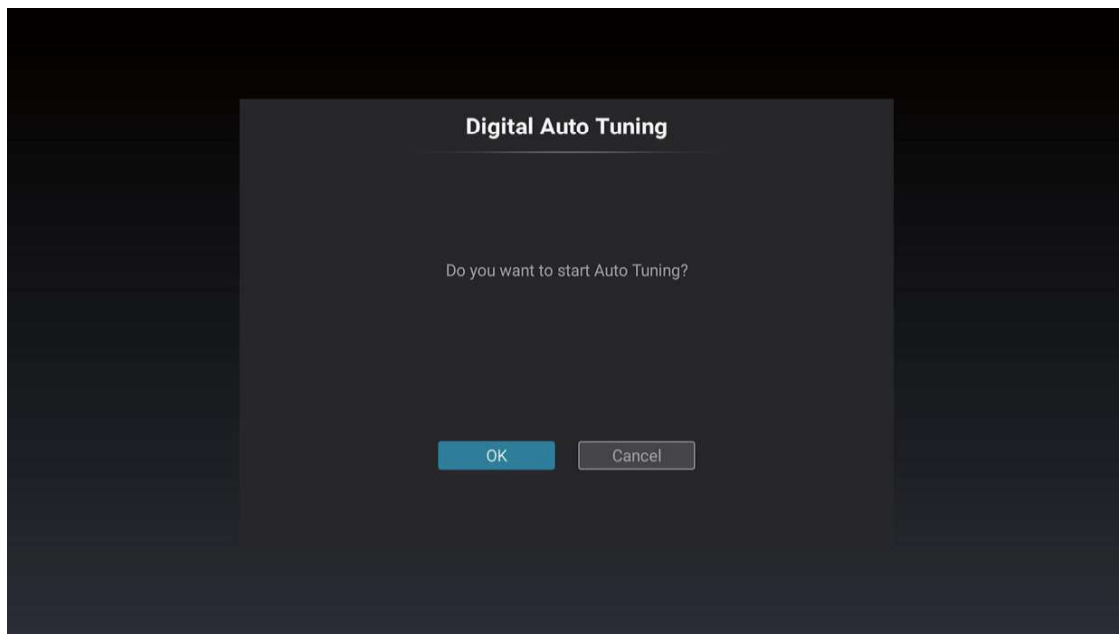

5.7.5 Manual Tuning

 Press ◀/▶ button to select **Manual Tuning**, and then press **ENTER** button to enter Select Start Scan to search the menu will appear as follows:

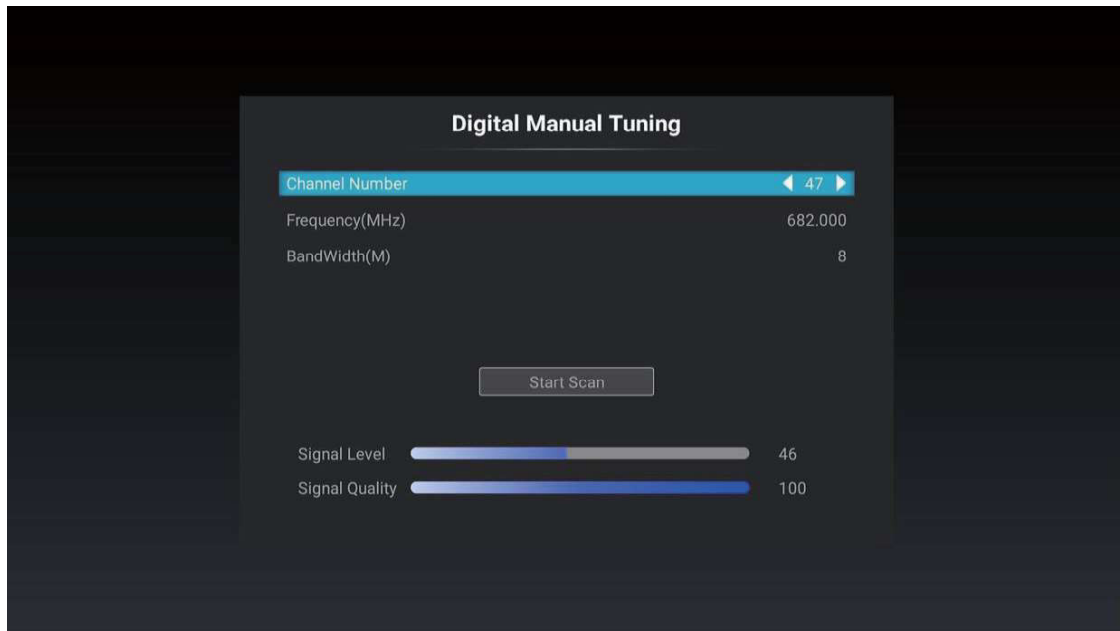


5.7.6 Record menu

Press ◀/▶ button to select **Record menu**, and then press **ENTER** button to Submenu selected. The menu will appear as follows:




5.7.6 Subtitle Language

 Press ◀/▶ button to select **Subtitle Language**, and then press **ENTER** button to the subtitle language selected. The menu will appear as follows:

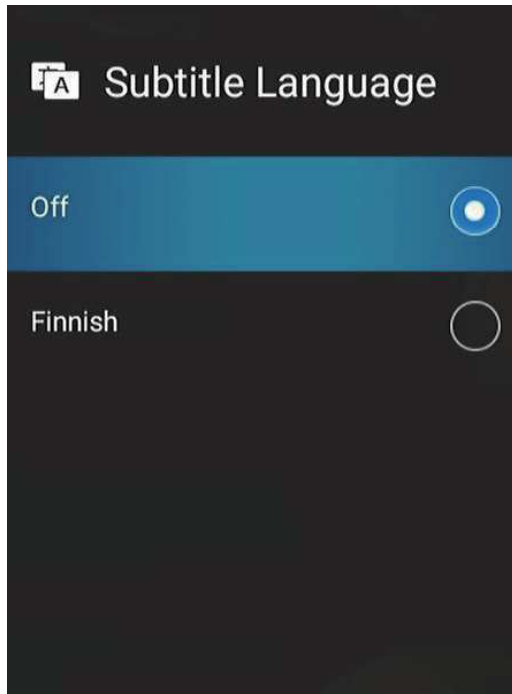


5.7.7 Multi Audio

 Press ◀/▶ button to select **Multi Audio**, and then press **ENTER** button to enter. The menu will appear as follows:

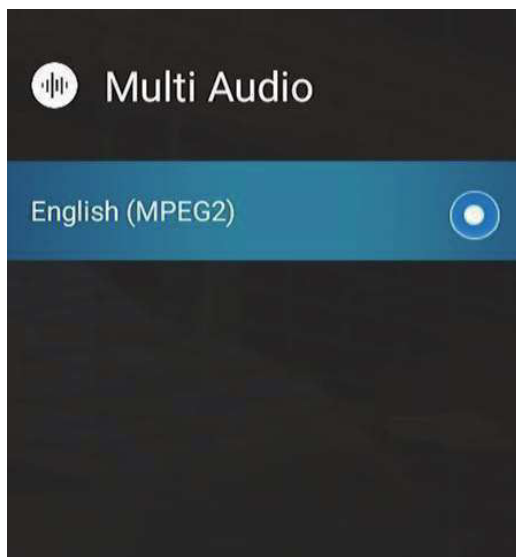


5.7.8 DTV Setting

 Press ◀/▶ button to select **DTV Setting**, and then press **ENTER** button to enter. The menu will appear as follows:

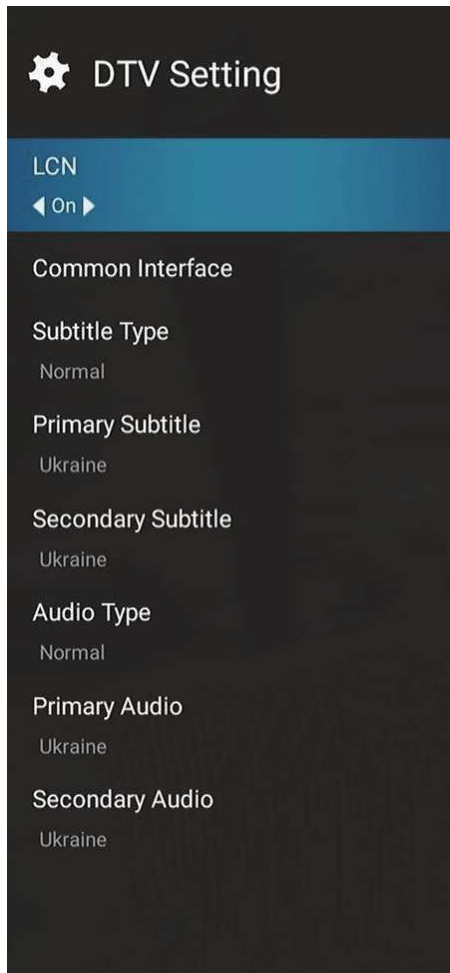

5.8 Quick Menu

 1. Press ▲/▼ button to select the option that you want to adjust in the **Quick Menu**, then press **ENTER** or ▶ button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.

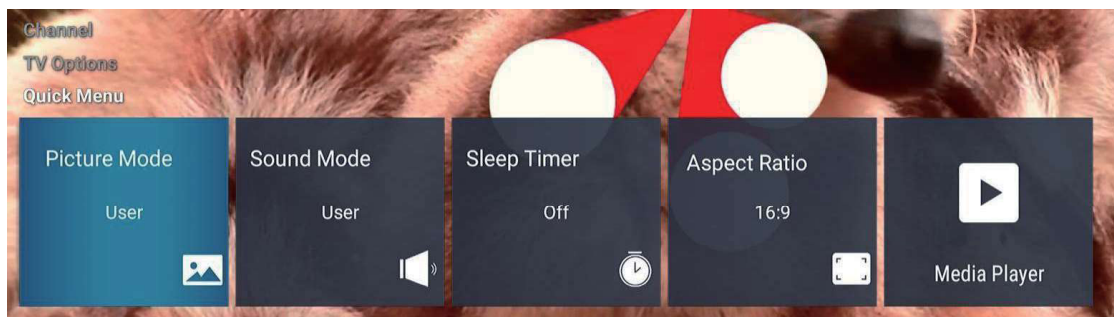


6. Home


6.1 Apps

The picture is for a reference only; the actual item is the standard.

 
Press ▲/▼ button to select **Apps** in the **Source Menu**, and then press **ENTER** or ► to enter.

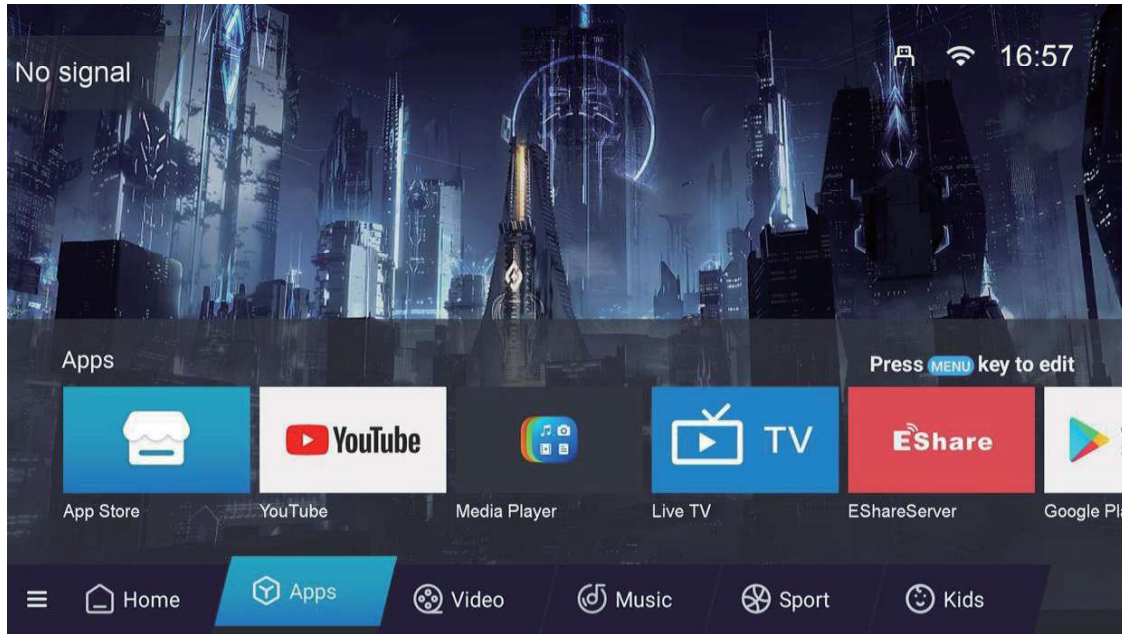

 You can button to select **App Store** to download apps what you want, as the figure shows.

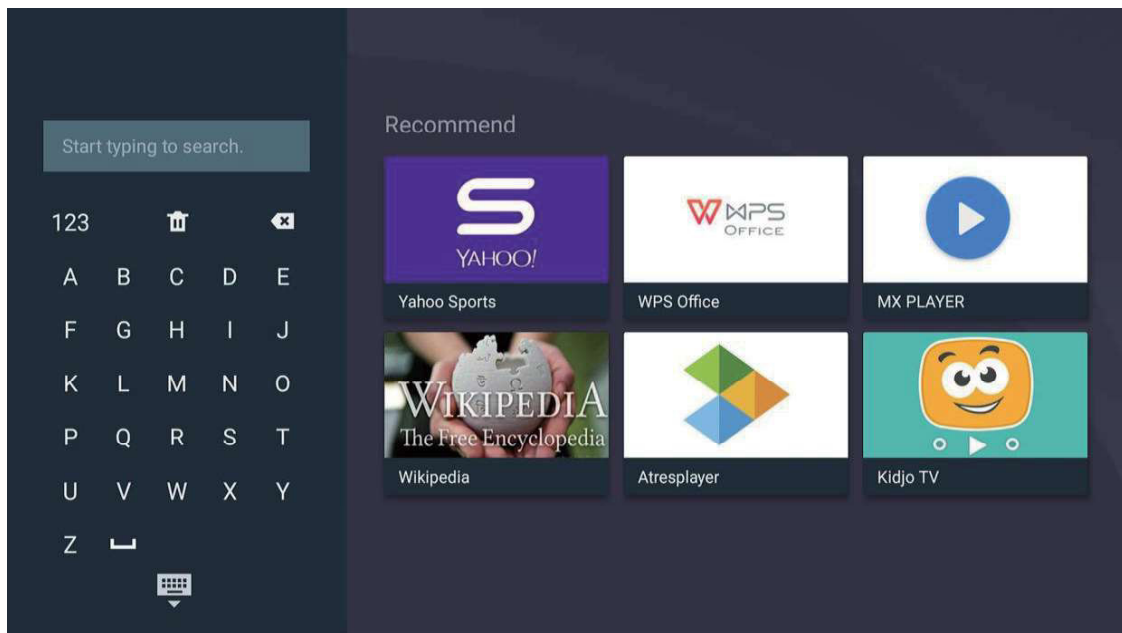

 
You can also select Browser to search the internet, as the figure shows.

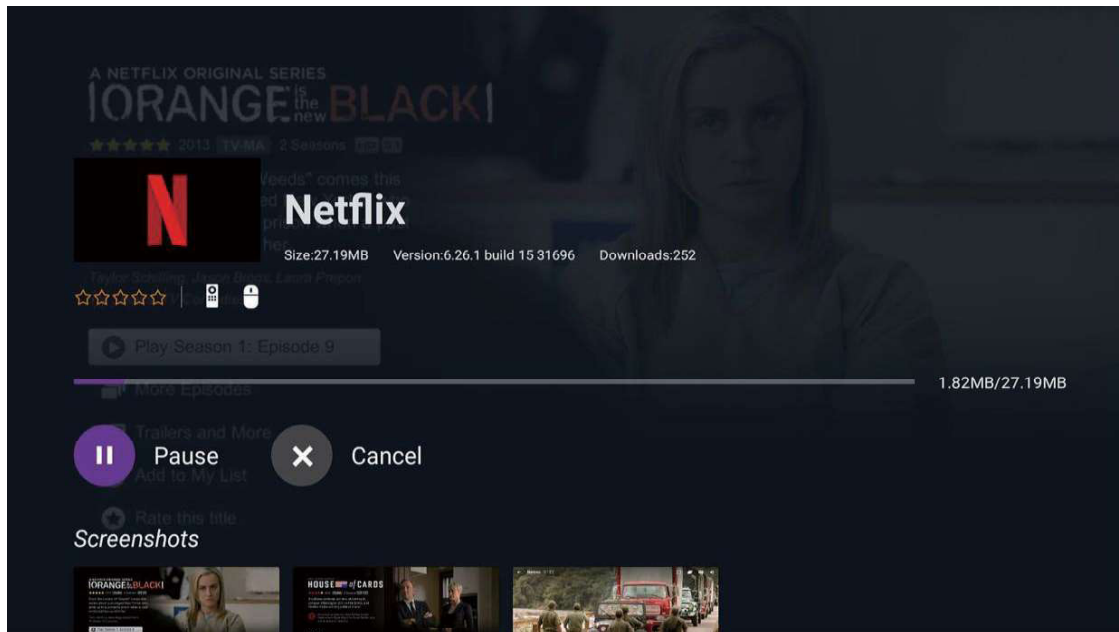

6.2 Home

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **TV** in the **MY APPS** Menu, and then press **ENTER** or ► to enter.

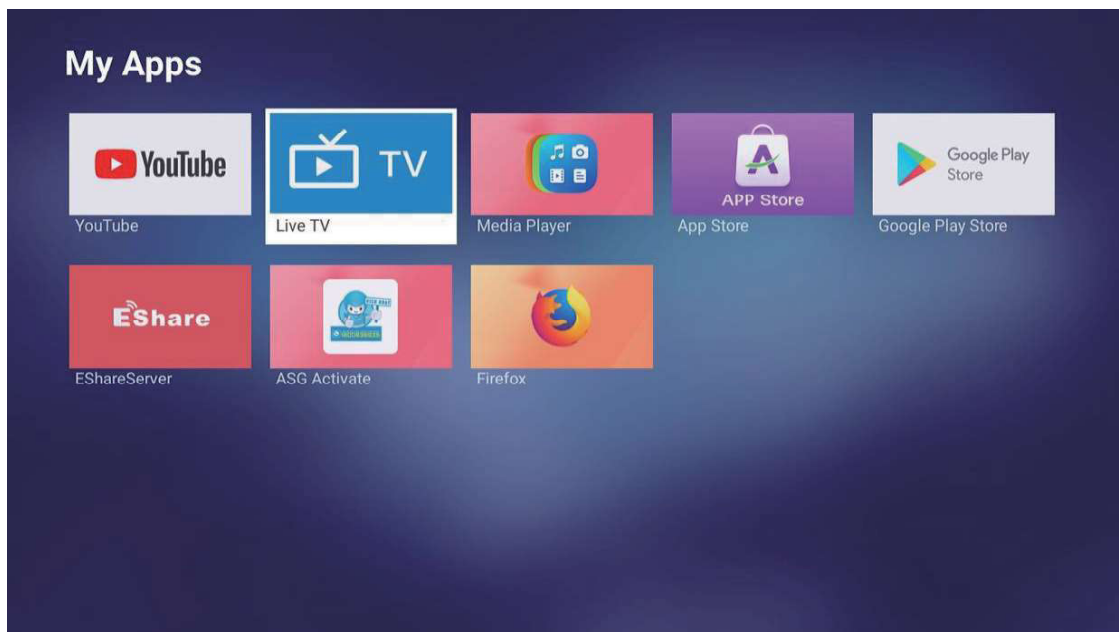


6.3 Media Operation

The picture is for a reference only; the actual item is the standard.

Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.

 Press **▲/▼** button to select **MEDIA Player** in the **MY APPS**, and then press **ENTER** to enter. You can also enter the **Media Player** by pressing **MEDIA** button on the remote control.

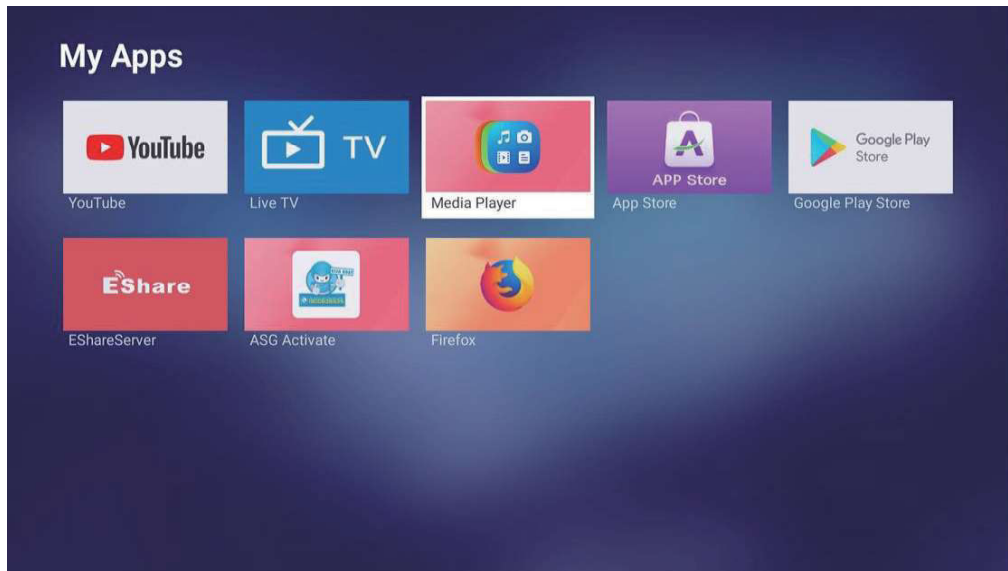




6.3.1 Photo

The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Photos** in the main menu, and then press **ENTER** button to enter.

   Press **EXIT** button to return back to the previous menu.

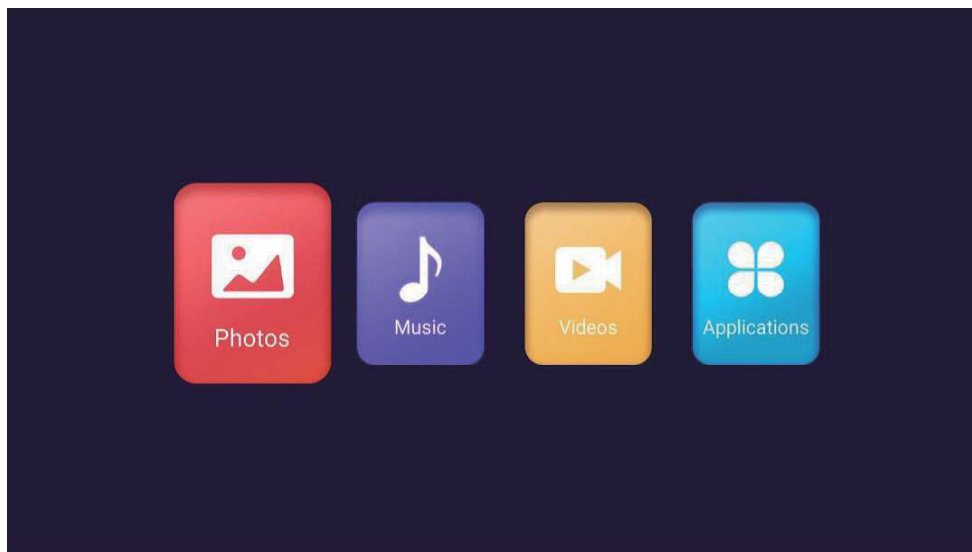

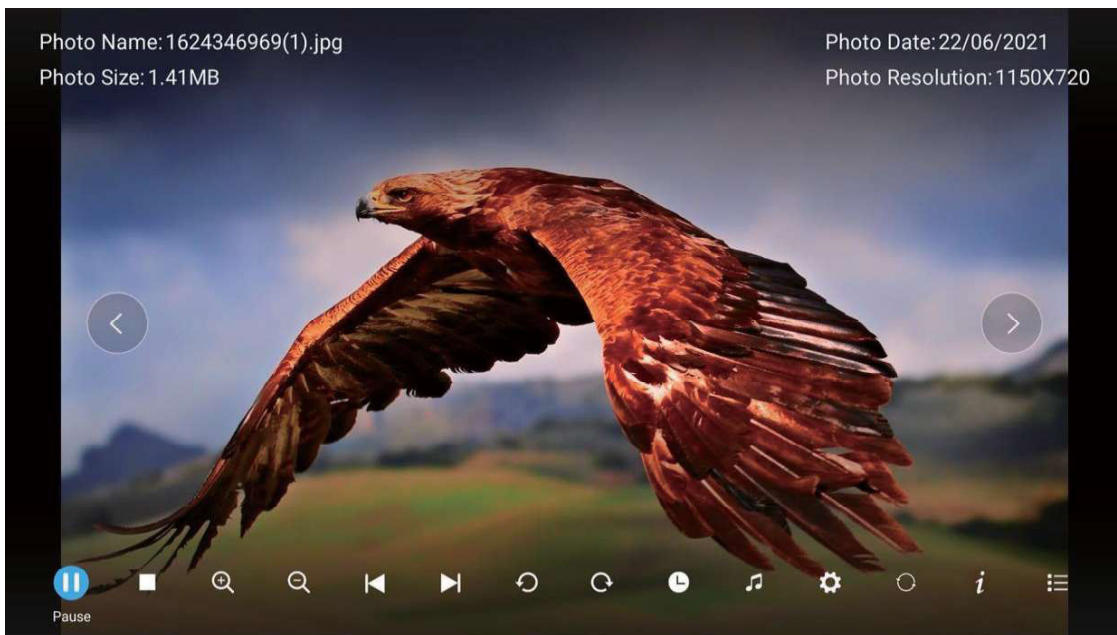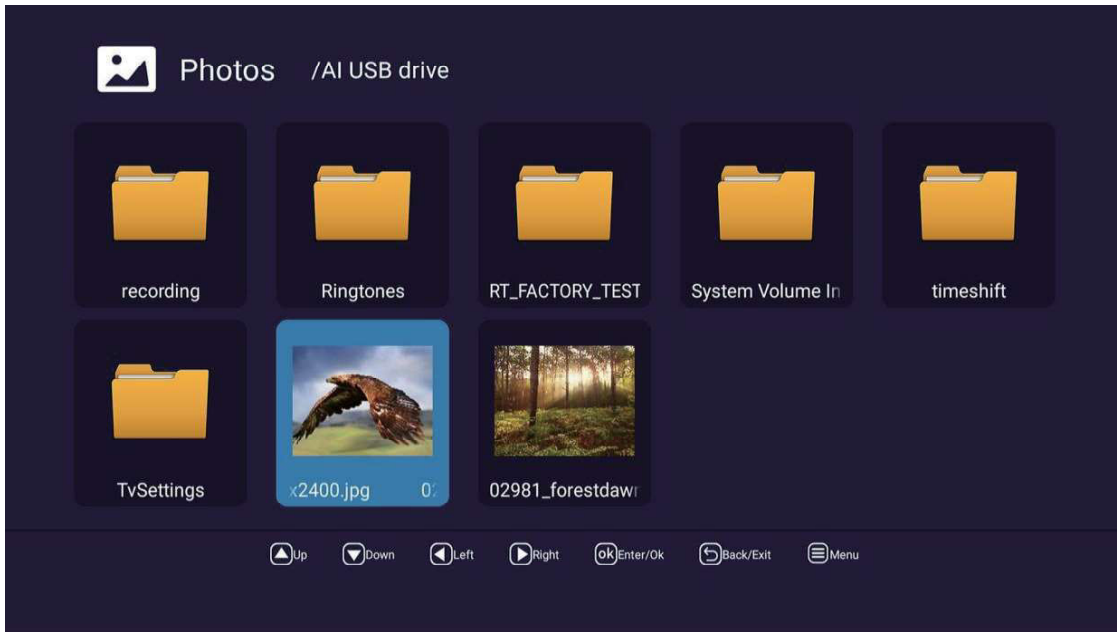

You can see the information of the current playing photo after press **INFO** button, then press ►|| button to play or pause, you can see the playing state in the right.

Then press ▲/▼ button to rotate the picture.

 
Notes: Other menu and description are the same as that for Movie menu.

6.3.2 Music

The picture is for a reference only; the actual item is the standard.


Press ◀/▶ button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.

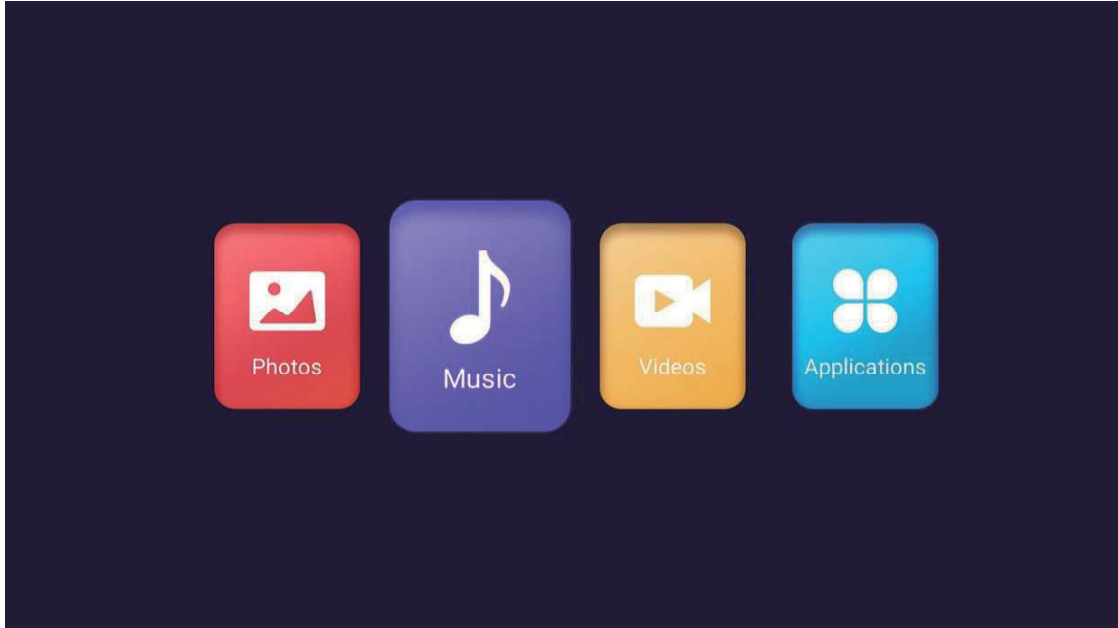


Press ▲/▼ button or ◀/▶ button to select the folder that you want to music.

 Press **ENTER** button to select the sub folder.

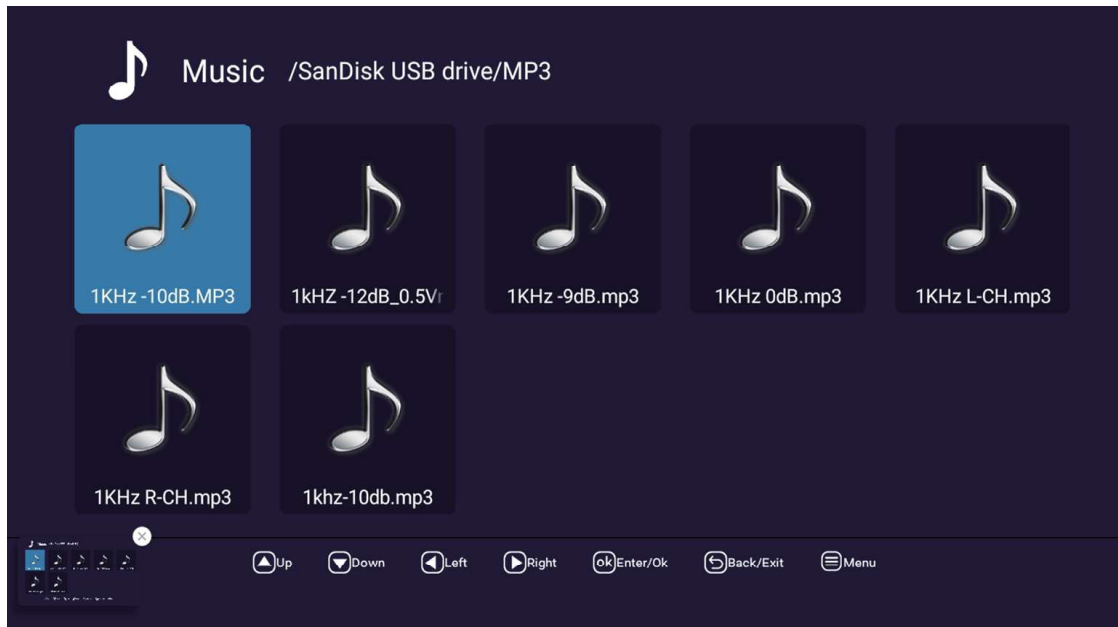

You can see the information of the current playing photo after press **INFO** button, then press **▶ ||** button to play or pause, you can see the playing state in the right. At the left of the menu.

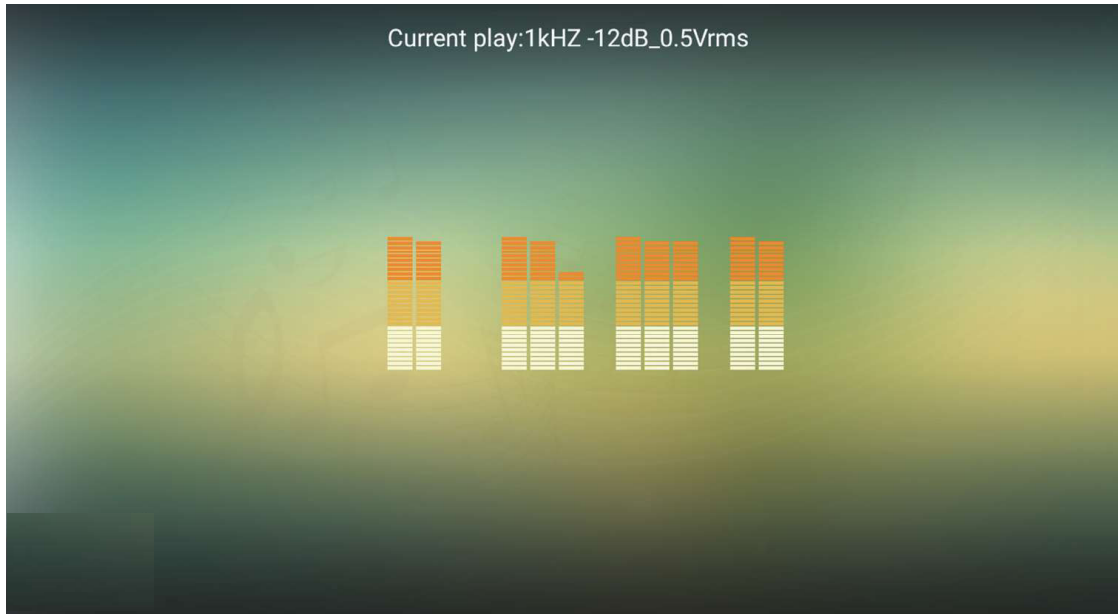 


6.3.3 Video



The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Video** in the main menu, then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu.

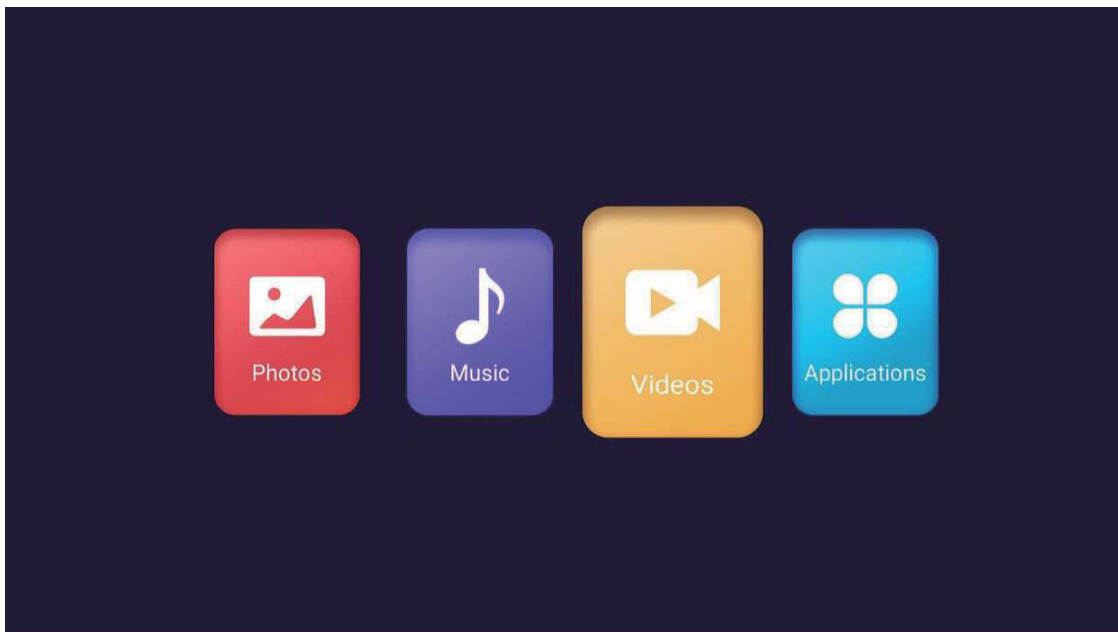

  Press ▲/▼ button or ◀/▶ button to select the folder that you want to view.
Press **ENTER** button to select the sub folder.

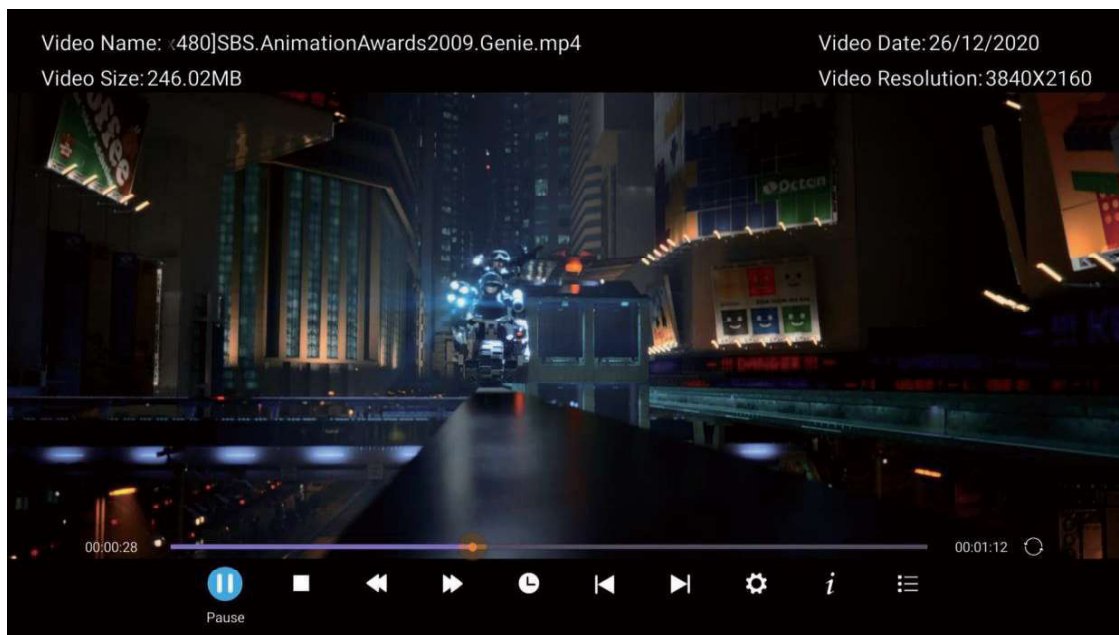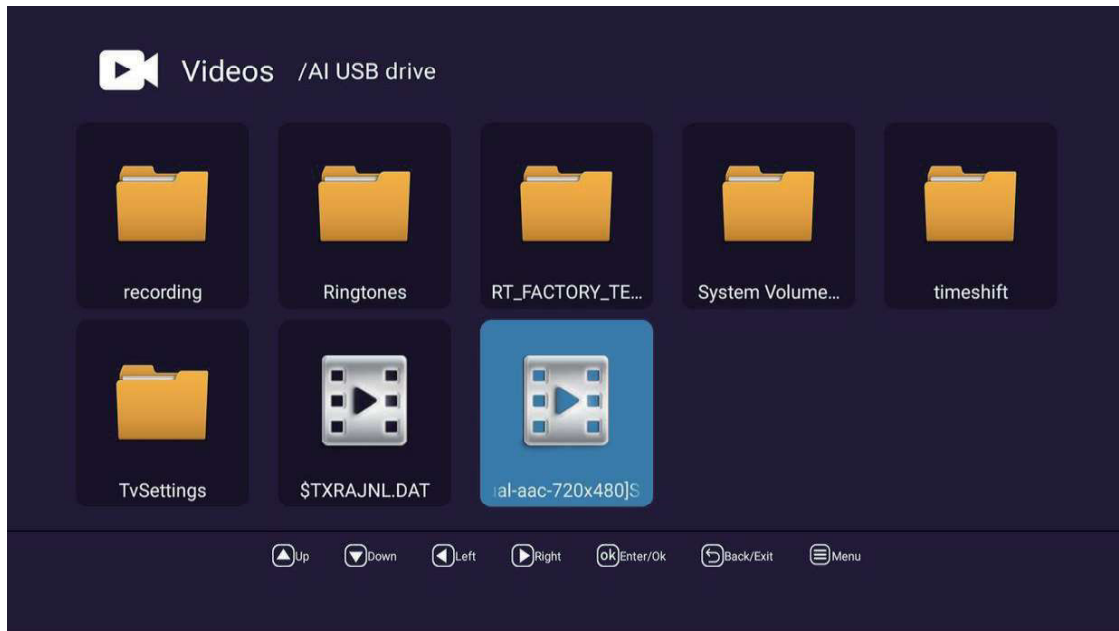


Press **ENTER** button or ▶ || button to play Press ■ button or **EXIT** button to stop playing.
Press the ◀ button to return back to previous page.
You can see the information of the current playing media at the first few second or after press **INFO** button.

6.3.4 Applications

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Applications** in the main menu, then press **ENTER** button to enter.

 
Press **EXIT** button to return back to the previous menu.

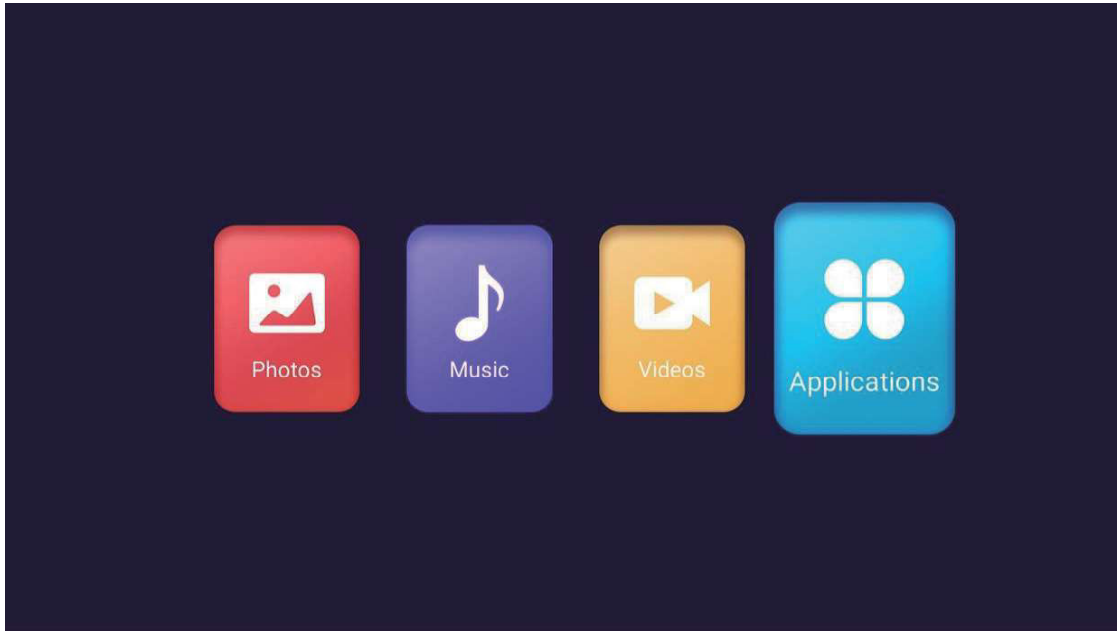

6.4 Setting

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **Setting** in the **Source Menu**, and then press **ENTER** or ▶ to enter.




6.4.1 Network Setting


The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Network Setting** in the main menu, then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu.

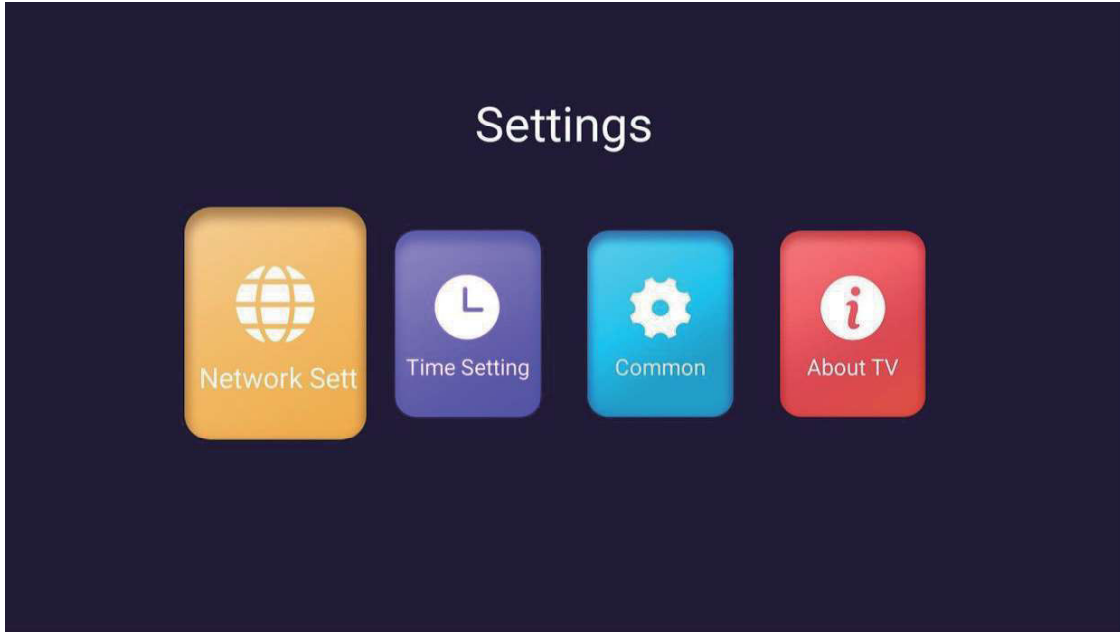


 Press ▲/▼ button to select the **Network Setting** that you can open the Wi-Fi.
As the figure shows.

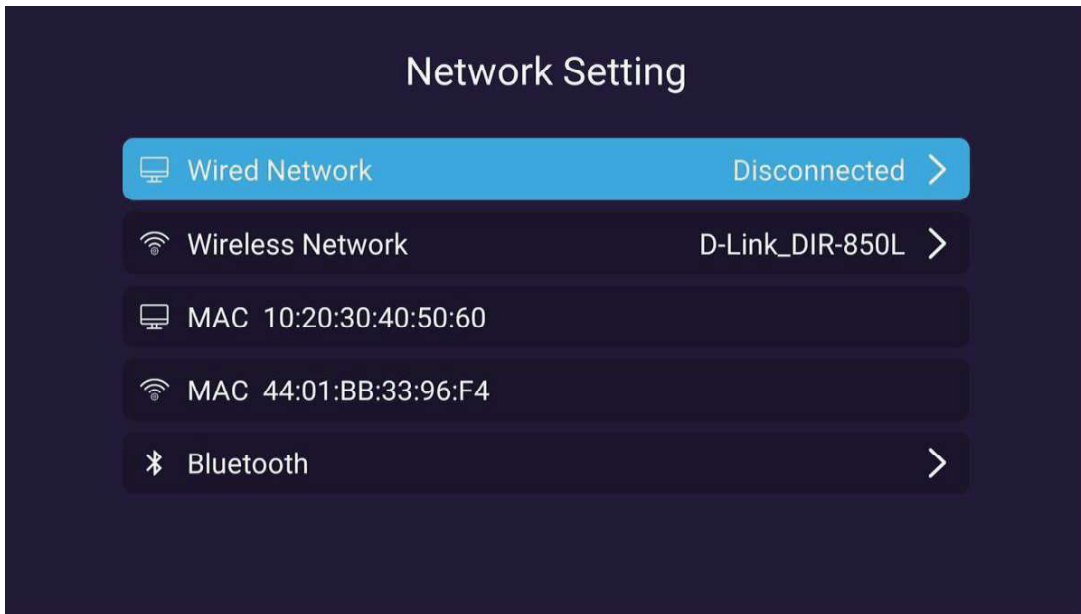


6.4.2 Time Setting

 Press ▲/▼ button to select the **Time Setting** that you can open the Wi-Fi.
As the figure shows.

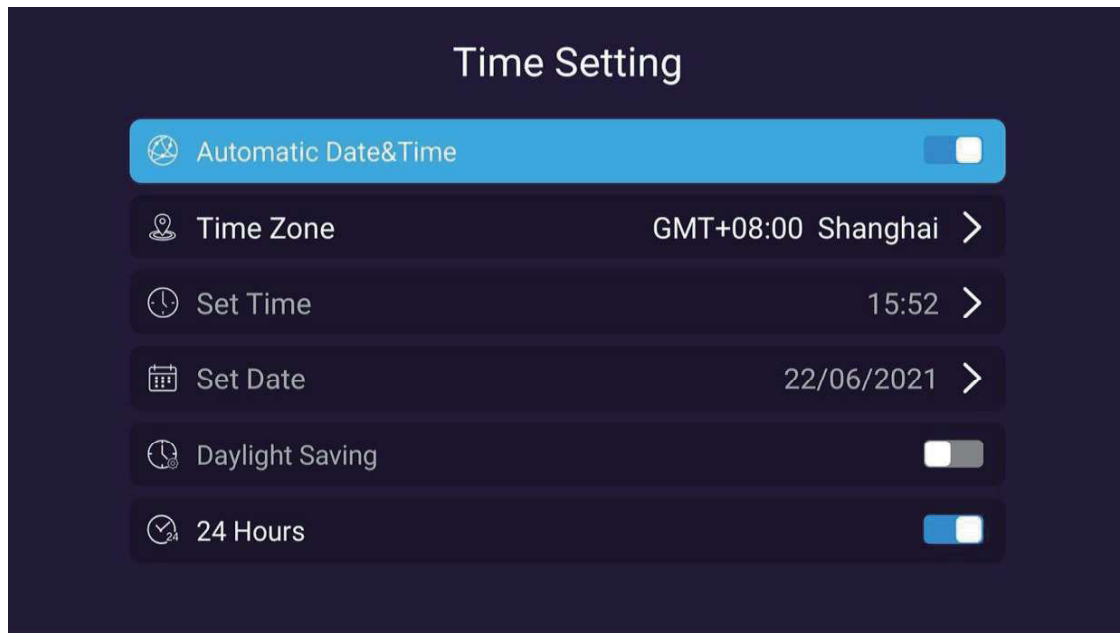


6.4.3 Common

 
Press ▲/▼ button to select the **Common** that you can open the Wi-Fi.
As the figure shows.

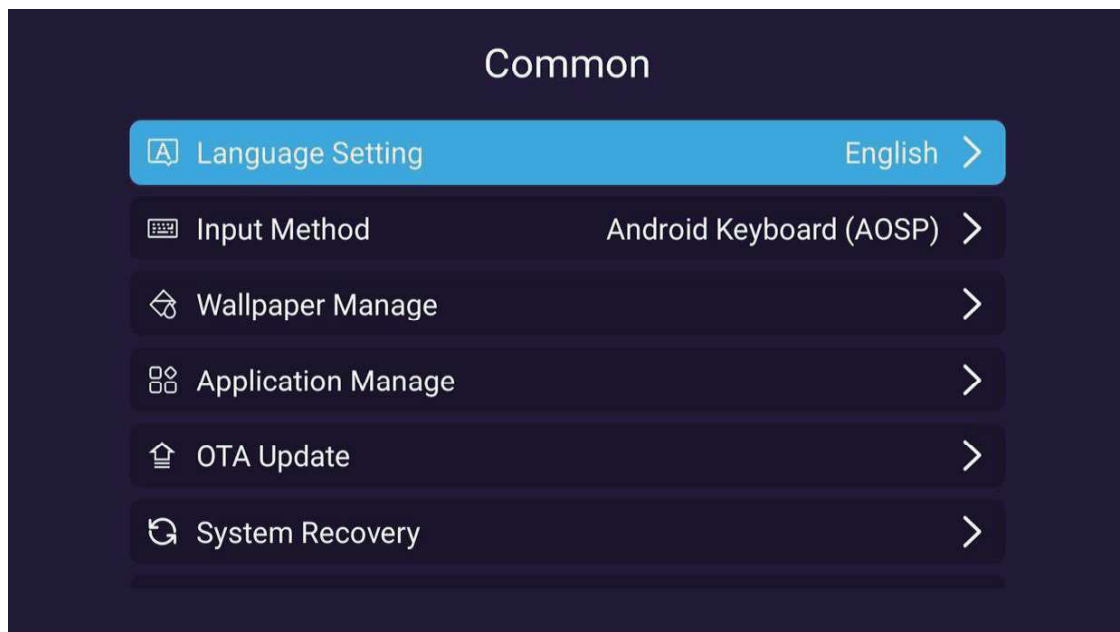


 Press ◀/▶ button to select the **Language Setting** that you want.
As the figure shows.

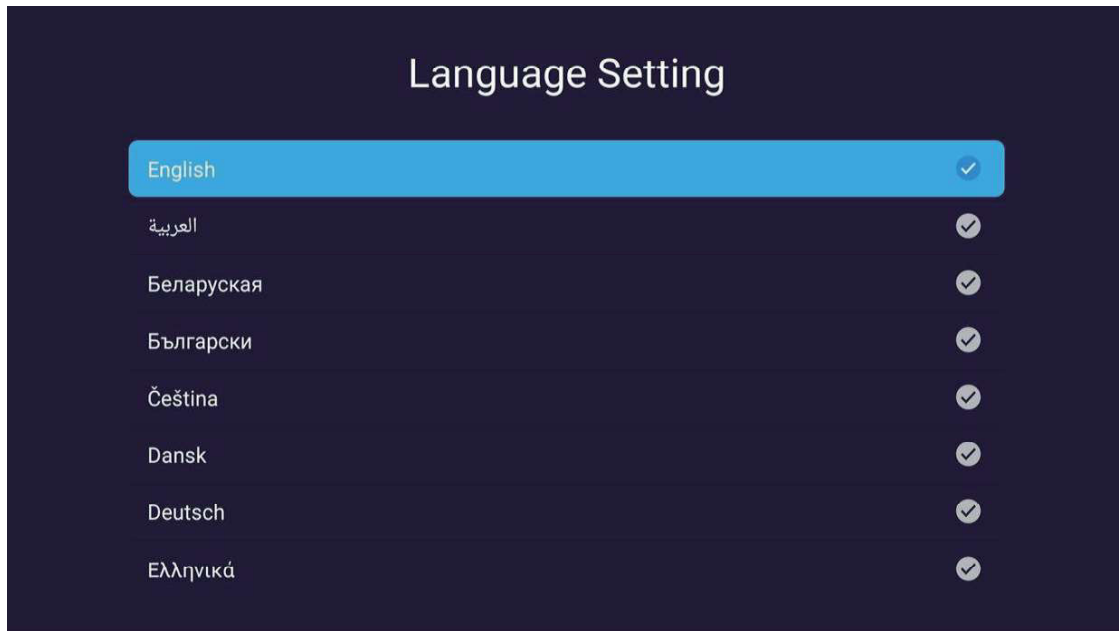

  Press ◀/▶ button to select **Application Manage** that you can know how many apps you have downloaded and this feature you also can unload the app.
As the figure shows.

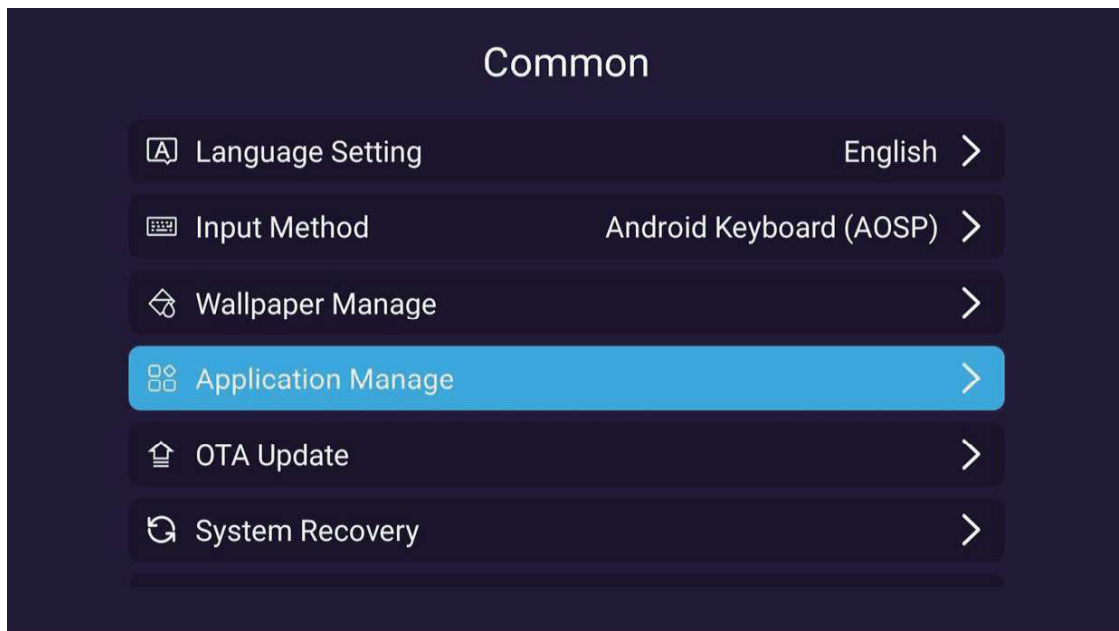

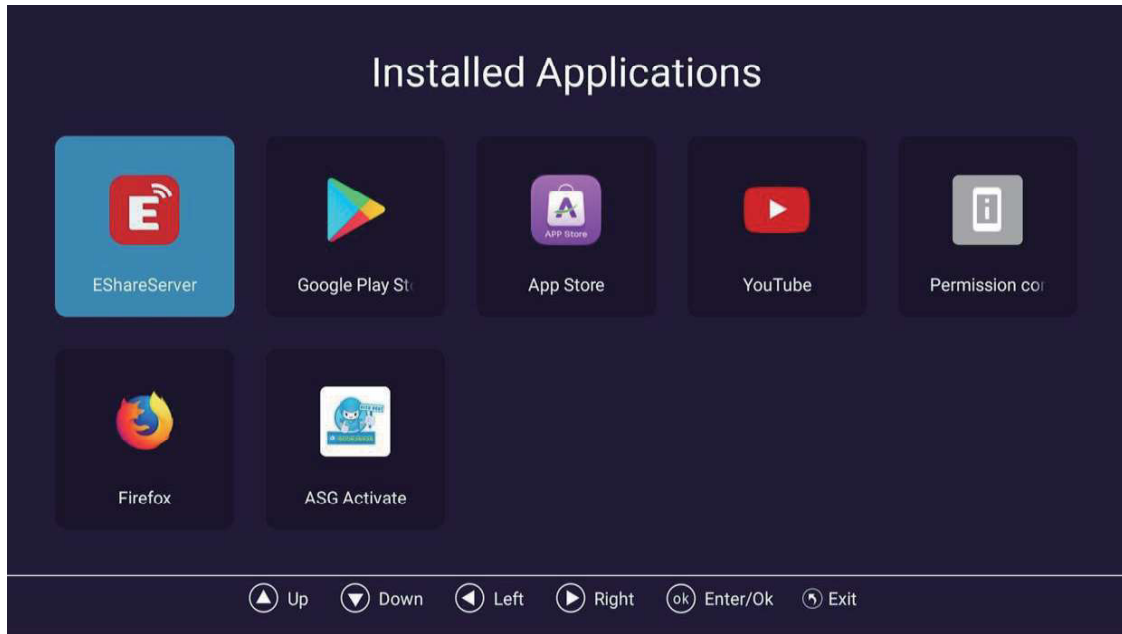


Press ◀/▶ button to select **System Recovery** that you can reset the system.
As the figure shows.



6.4.3 About TV

 Press ◀/▶ button to select the **About TV** that you can find the information about TV.
As the figure shows.

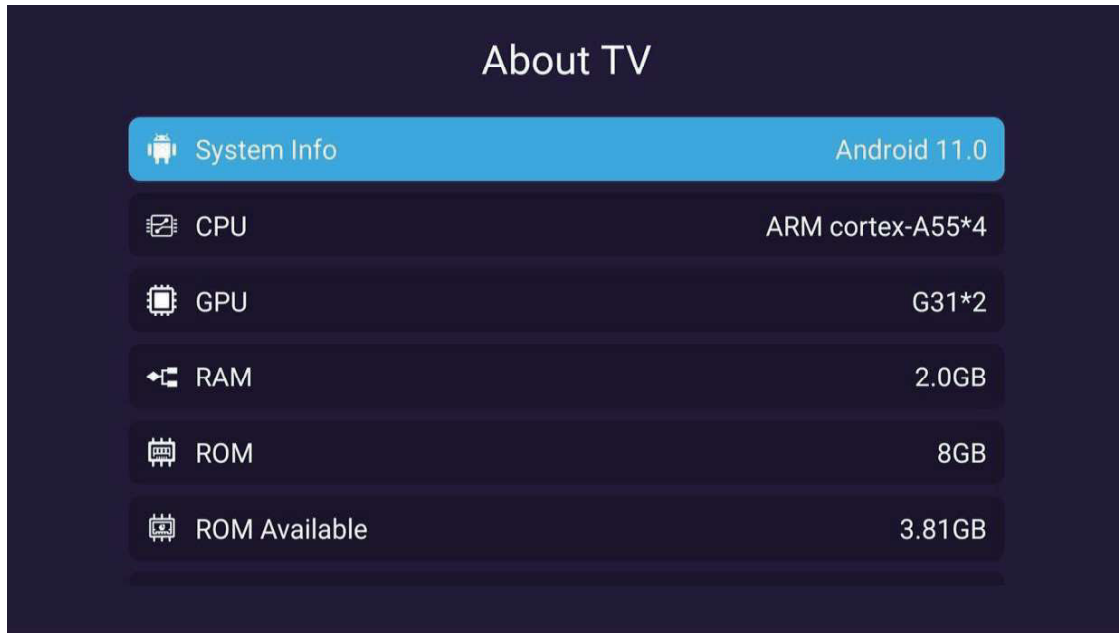

7. Troubleshooting

Carry out the problem-solving measures described in the following section before contacting customer support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LCD screen stays Dark.	Make sure the unit is turned on and the connections are correct. Make sure the power adapter is correctly connected.
There is no sound	Make sure the system connection is correct. Make sure the power of speaker is turned on.
There is no picture or picture move up and down unsteady.	Make if the connections with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there are no obstructions between the remote control and the unit. Make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Make sure the batteries are not weak. Replace the weak battery.

Other Notes:

Static or other external interfere may cause the player to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician