



**Model Number: OC-1210PS
Recreational Vehicle (RV) and Marine**

**Fanless 12Volt 10Amp peak (8A constant)
Switched-Mode Microprocessor Controlled
Programmable Automatic Battery
Charger and Power Supply**

Australian & New Zealand Standard
AS/NZS 60335.2.29 compliant including
clause 21.102 for vibration and legal use
in caravans and similar vehicles.

**You are now the owner of one of the most
advanced, reliable and feature packed chargers
available today.**

**Please take the time to read and understand this
manual, even though it may have already been
installed for you.**

Installation and User's Manual.

FEATURES

Congratulations on purchasing an OzCharge fully automatic switched-mode battery charger. OzCharge battery chargers comprise of the latest technology and incorporates the following features:

- High frequency Switching Mode with pulse charge output.
- Microprocessor controlled.
- No fan! No noise to keep you awake at night and no moving parts to wear out and fail.
- Quick connect output DC socket. Mini Anderson PP30 Connector.
- Automatic Power-Supply mode.
- Suits all **12V conventional lead-acid batteries** only. (user selectable):
Conventional wet flooded, Calcium, Absorbed Glass Mat (AGM) & Gel
- Battery rejuvenation (De-Sulphation) function (user selectable)
- Heavy-duty cables & fittings.
- Designed for Australian & New Zealand conditions and applications.


----- WARNING -----

- We recommend that it is used and/or installed indoors only and should never be directly exposed to water, rain, pressure washer, etc.
- Make sure you are using proper AC mains power voltage.
- Do not attempt to use the charger if it has been dropped or damaged.
- Never attempt to charge a damaged battery, frozen battery or non-rechargeable battery.
- Do not use the charger in a closed area or poorly-ventilated area.
- Never smoke, use an open flame, or create sparks near a battery or charger during charging operation as this may cause an explosion / explosive gas.
- Do not operate the charger if any of the cables or plugs are damaged.
- Do not disassemble the charger. Take it to a qualified and authorised person if any repair is required.
- The charger must not be used or played with by infirm persons or children. Also keep it away from any pets.

CAUTIONS

- Ensure the correct Battery Type is selected before the first use **or any** battery replacement.
Do not charge using an incorrect Battery Type setting. (EG: do not charge a Gel battery with Calcium battery selection setting or vice-versa as this may damage your battery)
- If you are in doubt as to what battery type you have, refer to the battery Supplier or Manufacturer. Do not guess or assume as this may damage your battery.
- Incorrect Battery Type selection may result in your battery being under charged or over charged and any damage will not be covered by warranty.
- Check the Battery Manufacture's specific precautions. EG: such as removing or not removing cell caps whilst charging.
- As a general precaution, someone should be within range of your voice or close enough to come to your aid while working with any battery.
- Wear protective goggles and turn your face away when connecting or disconnecting a battery.
- If battery acid contacts your skin or clothing, wash immediately with soap and water. If acid enters your eye, immediately flush the eye with running cold water for at least 10 minutes and seek medical attention.
- To reduce risk of damaging the battery, avoid dropping any metal tools onto the battery. Wrap spanners with electrical insulation tape to minimise the risk of a short circuit.
- Never rest the battery being charged on top of your OzCharge battery charger or place the charger on top of the battery.
- The battery charger should be installed and kept as far away from the battery as the output cables permit.

CONTROL AND INDICATORS

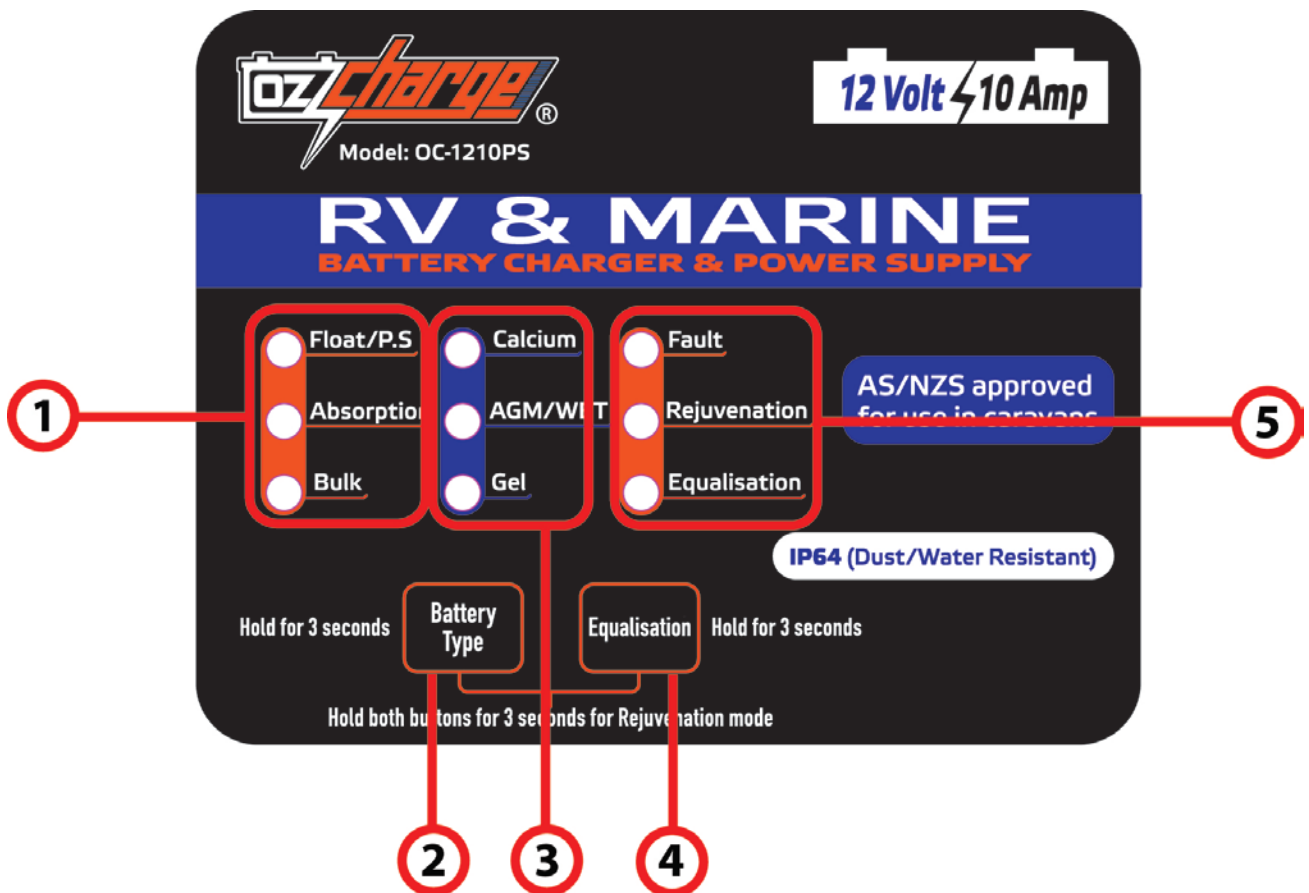


- 1. Charge stage indicator LED's.**
Shows what the stage of charge mode is. See page 7 for details.
The **Float/PS** LED will automatically come on when used with no battery as a Power Supply (PS).
- 2. Battery Type button.**
Allows the user to program the charger for the battery type connected. Hold for 3 seconds to change. See page 5 for details on each battery type.
- 3. Battery Type selection.**
Shows what battery type is programmed. Use **Battery Type** button to change.
- 4. Equalisation button.**
Allows the user to start an Equalisation charge cycle. Hold for 3 seconds to begin.
Refer to page 7 before use!
- 5. Fault, Rejuvenation and Equalisation mode LED's**
Refer to page 7 & 8 for more information.

INSTALLATION

This product is designed to be installed in a hardwired situation only.

Because this charger has no fan it is important to **mount it in an area of good ventilation**. Nothing should be located within 100mm (4 inches) of the charger unit to ensure natural convection cooling takes place. Choose a suitable location that meets these requirements. In camper-trailers and caravans especially make sure the location is not used for storage of things that may limit the airflow like tents/swags/canvas awnings that may wrap around the unit during travel and not be unfolded or used at the next destination.

NOTE if this charger does get too hot, it is not a danger as the unit will automatically “foldback” and reduce the output the current and continue to work at a lower power level to prevent overheating. The battery recharge time however will be longer. Only in extreme ambient heat environments the unit may shutdown.

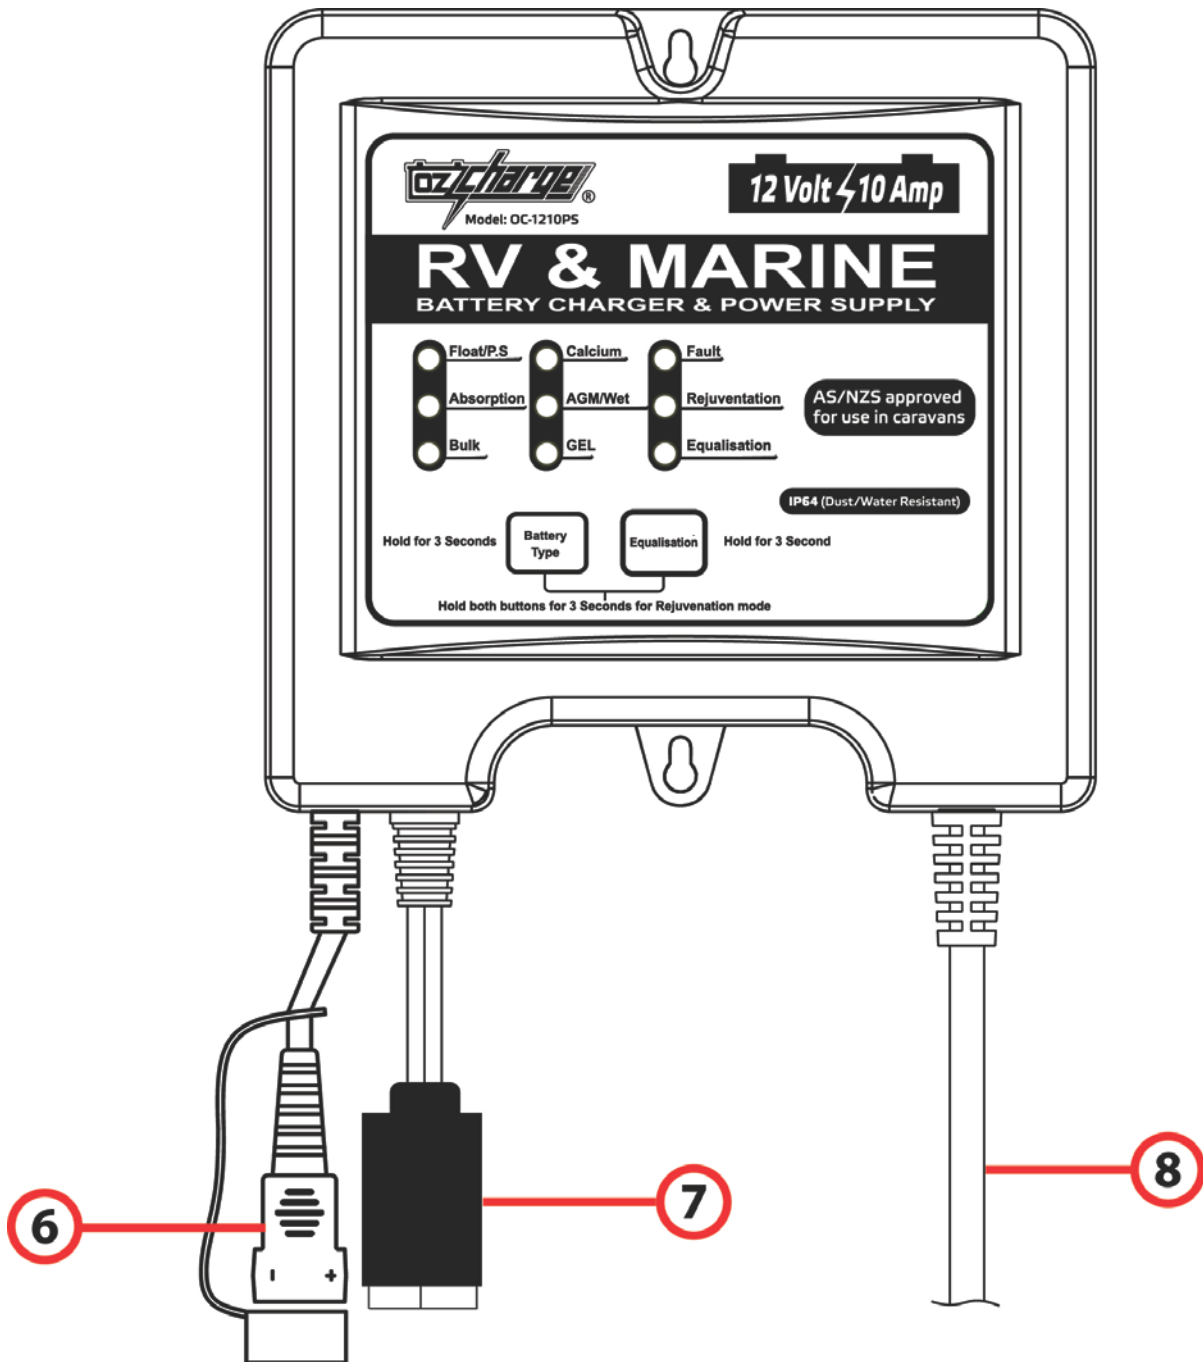

6. Temperature Compensation sensor socket.

Before any use, connect only the provided sensor. Do not modify the cable in any way. Connect the sensor to one of the battery terminals (preferably the Negative).

7. DC output socket.

Anderson 30Amp Power-Pole (PP30) connector. Use the matching cable provided to connect to the battery (preferably via the battery master fuse). This cable can be shortened. Extra care should be taken before making this cable longer to make sure any voltage drop is considered (a larger cable will probably be required depending on the distance).

8. AC mains input plug.

For use with 220-240Vac only.

PROGRAMMING

Before any use, make sure the correct battery type is set! This is a list of common batteries from the lead-acid chemistry family;

- Conventional wet flooded cell. Also simply known as “Lead Acid”. This type will have screw-out vents for maintenance and topping up with distilled water. For this type use the **AGM/Wet** setting.
- Sealed Maintenance Free (SMF). This type still has a liquid acid inside (if you rock it from side to side you will hear it ‘slosh’ and move) but is not able to be opened for topping up. This type commonly has a “Magic Eye” for telling the state of charge too. Use the **Calcium** setting for this battery type.
- Absorbed Glass Mat (AGM). A common type of fully sealed and maintenance free battery used in a lot of camper-vans, caravans, motorhomes & boats as they emit no toxic fumes during normal use. Use the **AGM/Wet** setting for this type of battery.
- Gel. The original sealed battery type uses silica-dioxide to fix the acid in place. They can be difficult to identify and can be easily mistaken for an AGM battery. Use the **GEL** setting for this type.

IMPORTANT! If you are unsure of your battery type, check with your battery supplier or the battery manufacturer. Using the wrong setting can damage your battery and will not be covered under warranty.

AUTOMATIC POWER-SUPPLY MODE

This charger will automatically become a power supply in the event there is no battery connected or there has been a total battery failure. This allows you to use critical loads such as a water-pump in a remote area where no replacement may be available.

If there has never been a battery installed in your camper-trailer, caravan, etc you must have this unit plugged into AC mains to be able to operate the lights, TV, etc.

If you decide to install a battery at a later stage, you do not need to purchase another charger. Simply have a suitable battery installed by a professional automotive-electrician and check the **Battery Type** is set correctly.

If you have a battery installed and suspect there has been a battery failure of any kind, this feature will allow you to still be able to operate your DC loads such as lights and TV because the charger will still turn on when the battery has been disconnected and/or removed.

If this happens, disconnect the AC mains and have an automotive-electrician to disconnect the battery Negative terminal and then secure and insulate the cable so it cannot short-circuit or make contact with anything.

When AC mains is re-applied with no battery connected, the charger will automatically restart as a Power Supply. This is shown by the **Float/PS** LED coming on.

When the problem is fixed or faulty battery is replaced, it will automatically restart as a Battery Charger.

USE WITH OTHER CHARGING SOURCES

It is quite common in installations where this charger will be used to have other methods of charging the batteries also connected (and possibly in use) at the same time. Because this charger is has been designed as a voltage regulated product, there is little chance of this being a problem. Most alternators, solar controllers, DC-DC chargers, etc will not cause any ill-effect if used at the same time. However, we recommend that you check with the other equipment suppliers if you are not sure.

STORAGE

This charger has been designed to be left permanently connected.

We therefore recommend that you plug the charger into AC mains when your camper-trailer, caravan, boat, etc is in storage so that the battery is always maintained at 100% state of charge and always ready for use.

If you don't have access to permanent AC mains power, consider solar panels and a suitable regulator (such as the OzCharge OCSR30) to keep the battery fully charged.

Keep in mind that all batteries have a certain rate of “self discharge” and will eventually go flat by themselves, so we recommend the charger be left connected to AC mains when not in use.

RECOMMENDED BATTERY CAPACITY

This product is designed to be installed in a hardwired situation therefore the battery capacity will normally be a fixed size and determined by the vehicle manufacturer. If the battery was supplied and installed in a campervan or caravan ask the manufacturer what make and model they have supplied as the battery is often out of sight and/or in a protective box. For all other installations such as marine and offgrid solar installation refer to the battery label or system owner's manual.

Always refer to the battery manufacturer for the minimum and maximum allowable charge current.

We recommend this charger be normally used with 80-100Ah deep-cycle battery. However it can be used with up to a 160Ah battery maximum (200Ah for maintaining) but the recharge time will be very long which can be annoying to you and your neighbours when using a generator.

Remember that standing DC loads such as lights, TV, fridge, etc that are being used at the same time you are trying to charge your battery will "steal" power away leaving only the difference available for recharge.

EG: if the charger working at its full 10Amp output and running 4Amps of other loads simultaneously, there is only have 6Amps left available to charge the battery.

USE WITH GENERATORS

This product is designed for safe use with generators. **Test your generator with the charger before you leave home!**

We recommend only using "inverter" type generators (ie: Honda EU or Yamaha EF-iS) or generators with an Automatic Voltage Regulator (AVR) on the alternator.

If you are using a 2-stroke or open frame "tradesman" type generator without an AVR, we highly recommend using an additional surge protector at the generator outlet.

Remember that powered sites in remote areas are often powered from a large generator too.

The charger requires approx 200Watts to run at its full output. Therefore we recommend the smallest generator used to run this charger is 1kVA (1000VA).

OPERATING INSTRUCTIONS

This OzCharge battery charger has been designed to be easy to operate and very simple to use. Please refer to the operating instructions below.

1. Pre-Charge Check

- (a) Check the Battery Electrolyte level (non-sealed batteries). If necessary, remove the vent caps and add distilled water so the levels are halfway between the upper and lower fill lines.
- (b) Location – Ensure the Battery is in a well ventilated area. **Never charge a conventional wet cell battery inside a campervan or caravan without adequate ventilation. This includes "Calcium" maintenance-free types.** Refer to Australian / New Zealand Standards 2676 and 3011 for indoor battery installations.
- (c) If your charger came as Original Equipment (OE) with your caravan, ignore this step. Keep the charger as far away from battery as the cables permit. Never place the charger directly above the battery being charged as gasses from the battery may corrode and damage the charger. Always keep the charger away from high corrosion / wet and moist areas.

2. Connecting the charger to your battery

Because this product is designed to be hardwired, this step will normally be done as part of the original installation.

- (a) Connect the Red lead from the charger directly to the positive (+) battery terminal.
- (b) Connect the Black lead from the charger directly to the negative (-) battery terminal. Do not connect to the chassis, fuel rails, brake lines, etc.
- (c) When multiple batteries are installed in parallel, always use a fuse or DC circuit breaker as close to **each battery** as possible.
- (d) If connecting the charger to batteries in parallel, connect the charger output lead to each of the **opposite ends of the battery bank** to minimise any voltage drop in each battery interconnect.

3. Connect the battery charger to the mains power (220-240Vac)

- (a) Note this could be from a generator, powered site, marina, or your home.
- (b) The charger will automatically start when AC power is connected.
(Note: If the Fault Indicator LED illuminates Red, please check your connections as the most common problem is that the Positive and Negative Leads are reversed. Refer to Trouble Shooting Page for further information)
- (c) **Ensure the Battery Type indicator LED matches your battery installed!**

Note: The charger will automatically memorise your charging rate setting and battery type setting. The next time you use the charger it will default to the last setting.

The Charging process

The charging LED's indicate all of the Charging Stages. The charging stages are in this order as follows:

- **Soft Start. Indicated by the green Bulk LED flashing.**
A Soft Start will only occur if the initial battery voltage is between 3V and 10.5V due to a deep discharge. During a Soft Start the unit will charge the battery using 2.5Amps until the battery voltage is over 10.5V.
If the green Bulk LED is blinking, **turn off all the loads** possible (lights, TV, etc) until the Bulk LED turns solid and stops blinking.
- **Bulk charge. Indicated by the green Bulk LED on solid.**
Charges the battery using a constant maximum current (10Amps maximum) until the battery voltage rises to the Absorption level. This stage is generally the first 60%.
- **Absorption. Indicated by the green Absorption LED on solid.**
This stage charges the battery using a constant voltage (determined by the Battery Type setting). This stage is generally the second 30%.
- **Float. Indicated by green Float/PS (Power Supply) LED.**
During the first hour of float charge (>90%) the green **Float/PS** LED will blink.
When the battery is 100% and fully charged the green **Float/PS** LED will turn solid. It will now be trickle charged and maintained at a safe constant voltage (determined by the Battery Type selection).
- **Equalising.** Indicated by the green Absorption LED flashing and the Equalisation LED on.

Equalisation mode (not possible in GEL mode).

This mode is a well proven way of extending the life of your battery, especially when used in a deep-cycle application such as a camper-trailer or with an electric outboard on a boat. Activating this mode will force the battery voltage higher than normal, at a limited output current to perform a controlled overcharge, reactivating all of the chemicals maximising all of the available capacity. Every battery manufacturer has different guidelines for Equalisation so check with them before activating this mode. As a general rule though, use this mode once a month if you are use the battery heavily to once every few months if you use it lightly.

Rejuvenation mode (Patented).

Your OzCharge battery charger provides a unique battery "Rejuvenation" function.

What does this feature do? The Rejuvenation mode uses high frequency and high voltage pulses that has been proven to break down the crystalline form of lead sulphate (commonly called "Sulphation" pronounced "Sul-Fay-Shon") within the battery cells which helps extend your battery life. Sulphation can occur when batteries are regularly discharged, have insufficient recharge time and/or they are left in a discharged state. We recommend that you periodically use this rejuvenation (de-Sulphate) feature to ensure you get the maximum life out of your battery, only when connected to mains power (not on a generator due to the time and fuel that would be required).

While there are no true rules to follow, we suggest that if you use the battery on a daily basis, Rejuvenation every few months is adequate. If you only use the battery a few times a year, every 6-12 months or so is enough.

To activate the Rejuvenation feature, press and hold the **Battery Type** and the **Equalisation** buttons for 3 seconds until the yellow Rejuvenation LED begins flashing.

Once the charger has entered the rejuvenation (de-sulphate) charging stage, the process will automatically stop after 24 hours.

CHARGER SPECIFICATIONS

1. Input: 220-240Vac nominal (216-264Vac); 50Hz;
2. Charging starting conditions: Battery must be over 3.0V
3. Rated output: 10Amps DC peak. 8Amps DC constant.
4. Type of battery: Lead-acid only (not Nickel-Cadmium, Lithium, etc). EG: Conventional/Calcium/AGM&Wet/Gel
5. Charging output voltage: 14.1/14.4/14.7V programmable for the "Absorption" stage
6. Float output voltage: 13.7V for the finish trickle charge stage
7. Equalise voltage: 15.5V current limited. Automatic for Calcium battery types
8. Operating Environmental: 0~40 degC, 90% RH maximum; non-Condensing
9. Net Weight (kg): 1.0 (approx.)
10. Dimensions (mm): 140L x 145W x 55D

TROUBLE SHOOTING

Problems	Indication	Possible causes	Suggest solution
Charger does not work	Indicator lights are not on	No AC power Internal fuse is blown due to poor AC mains.	Check the AC plug connection at the base of the main unit. Have the generator checked. Return the unit for service.
Charger has no DC output	Battery Type green LED is on.	No battery connection. Battery is deeply-discharged.	Check the battery connection is secure. Check the DC plug is fully connected (vibration may have caused accidental disconnection) Check the battery voltage is over 3V.
No Charging Current	Fault LED is blinking. Fault LED is on solid. Fault <u>and</u> green Bulk LED are Flashing	Output is shorted or battery is connected in reverse. Over temperature shutdown Soft Start mode has timed out	Check the DC cabling & master fuse. Check the polarity of the battery connection. Check the charger is not covered and has good ventilation. Allow to cool. Restart the charger. Battery is in extremely poor condition. Turn off all loads. Restart the charger. Run the Rejuvenate mode. Replace battery if necessary.

2 YEAR MANUFACTURER WARRANTY

Zylux Distribution Pty. Ltd. (ABN 66 101 378 009) of 166 Christmas Street, Fairfield, Victoria, 3078, Australia warrants to the Customer that this product is substantially free from defects in materials and workmanship under normal use for a period of Two (2) Years from the Date of Purchase. Please ensure you keep a copy of your purchase receipt on file as this will be required to validate your warranty.

Obtaining Warranty Service:

Within the warranty period, the Customer must contact the authorised supplier / retailer where the product was purchased or alternatively you can contact the Oz Charge service centre through one of the following methods:

Service help phone: Within Australia (03) 9482 2203
 Outside of Australia: +61 3 9482 2203
 Website: www.ozcharge.com.au / www.ozcharge.co.nz

If the Authorised Supplier and / or Oz Charge service centre concludes that while under normal use, a product failure or malfunction occurred during the warranty period and was caused by a defect in material or workmanship (see Exclusions), the Customer will be asked to ship to the nearest service point for repair or replacement, at our discretion. The product must be packaged appropriately for safe shipment. To prove that the product is under warranty, the customer should enclose a copy of their receipt for proof of purchase. It is recommended that returned products be sent by registered mail as Zylux Distribution Pty. Ltd. (Oz Charge) accepts no responsibility / liability for goods lost or damaged in transit.

Exclusions:

If upon receiving a product for repair and if testing and examining the product has disclosed that the alleged defect or malfunction in the product does not exist or was caused by the Customer or any third persons misuse, neglect, physical abuse, water damage, unauthorised attempts to open, exposure to extremely high temperatures, tampered with or repaired by an unauthorised persons, this will not be covered under this warranty. Also charges may apply to any product returned which has no fault found or if the warranty has expired or been void.

This Warranty is also void if:

1. The warranty seal is broken or altered.
2. The warranty period has expired.
3. The product has been tampered with or repaired by an unauthorised person.
4. If used on a generator without using a surge protector.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.