

# THUNDER

## CONGRATULATIONS ON THE PURCHASE OF YOUR THUNDER LED HEADLIGHT REPLACEMENT KIT

For your personal safety read, understand  
and follow the information provided in this  
instruction manual.

**FOR OFFROAD USE ONLY**




*Connection to your Weekend Escape*

# SPECIFICATIONS


OPERATING VOLTAGE	12 / 24 Volts
LUMENS PER GLOBE	2,000 Lumens
IP RATING	IP65
LIGHT SOURCE MODEL	Luxeon ZES
COLOUR TEMPERATURE	6,500K
HEAT SINK	Aviation aluminium 6063
OPERATING LIFE	>3,000 hours
OPERATING TEMPERATURE	-40°C - +80°C

**FOR OFFROAD USE ONLY**


# GLOBE INSTALLATION

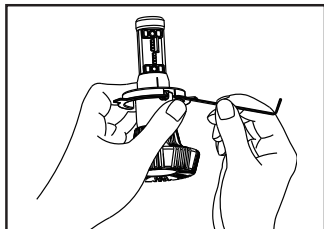


To remove the heat sink, first undo the grub screw with the supplied Allen key.

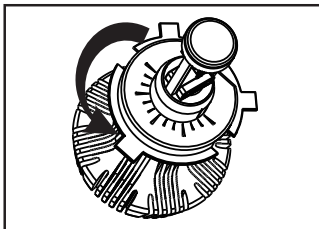


The heat sink will unscrew from the globe. Note: It is a long thread.

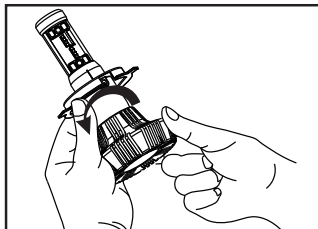


Remove the heat sink. It does not have to be removed from wiring & connector.

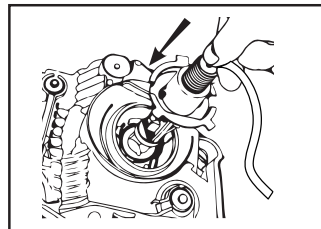


Once original headlight globe is removed, install the globe into the headlight fitting.

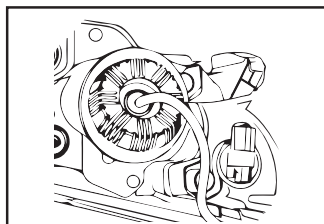


Screw heat sink back onto the globe body & tighten the grub screw.

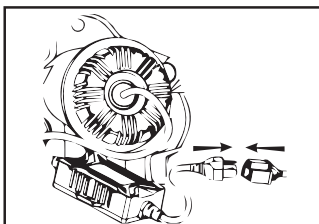

Connect wiring to the vehicle.

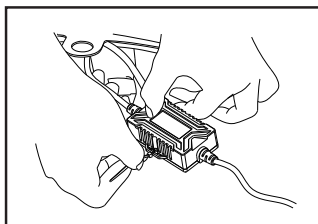

Secure LED controller to the vehicle.

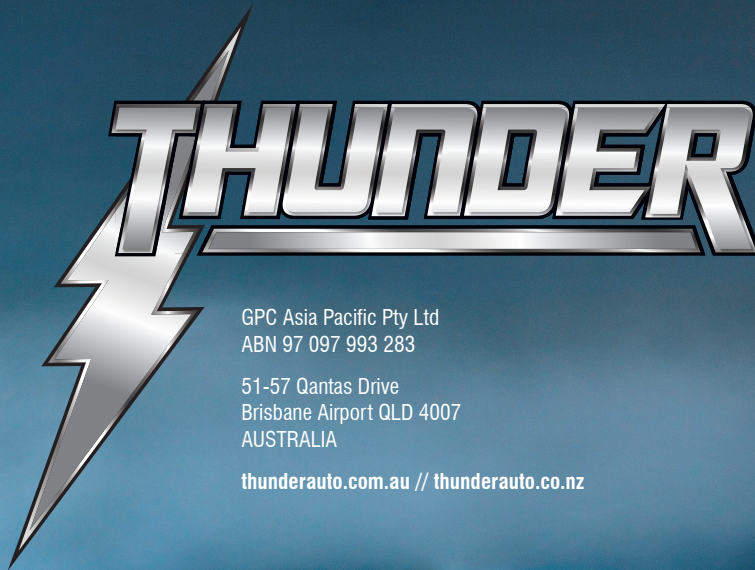

GPC Asia Pacific Pty Ltd  
ABN 97 097 993 283

51-57 Qantas Drive  
Brisbane Airport QLD 4007  
AUSTRALIA

[thunderauto.com.au](http://thunderauto.com.au) // [thunderauto.co.nz](http://thunderauto.co.nz)

