


# kojack<sup>®</sup>

LIFTING & LEVELLING

# BASEPLATE

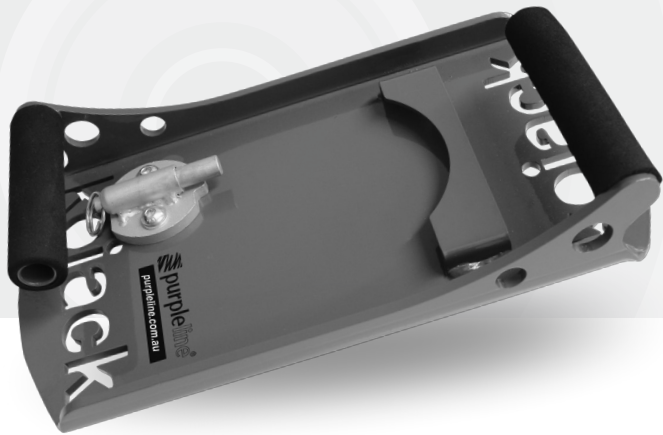

## User Manual


Product Code: KJBP100

 **purpleline<sup>®</sup>**  
design...innovate...improve

# Spread the load & improve stability for your kojack®




**STEP 1** Angle kojack® onto baseplate as shown

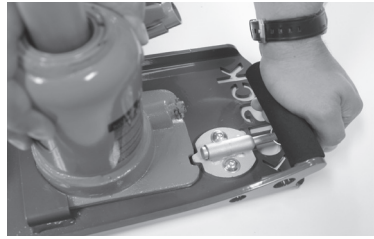

**STEP 2** Make sure the locking pin aligns with the notch on the kojack®



**STEP 3** Pull back the pin by holding onto the ring pull as shown

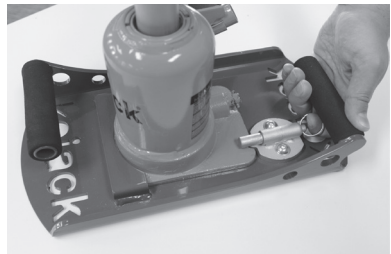

**STEP 4** Release the locking pin to secure kojack® onto baseplate



Purple Line® Pty Ltd  
12 Capital Court  
Braeside VIC 3195

T: +61 (3) 9588 2959  
E: [enquiries@purpleline.com.au](mailto:enquiries@purpleline.com.au)  
W: [www.purpleline.com.au](http://www.purpleline.com.au)

 **purpleline**®  
design...innovate...improve