PIRANHA OFFROAD PRODUCTS

BTMB50TDI


Piranha Off Road products are not associated in any way with FORD Motor Co of Aust Ltd or any of its related companies' 'Piranha Off Road products are not associated in any way with MAZDA Australia Pty Ltd or any of its related companies'

To Suit FORD RANGER / MAZDA BT50 4 CYL TDI (Manual)







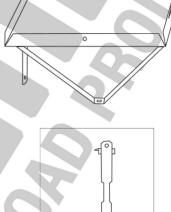



FITTING INSTRUCTIONS

PARTS INCLUDED WITH TRAY

1 X M8 Bolt Long

3 X M6 Hex

1 X M6 Nut

2 X J Bolts

1 X Special Top Mount

The cradle fits passenger side front.

Fits in the corner behind the headlight on the passenger side.

Remove rear bolt from flat in-between head light & air cleaner Move wiring loom from same position

Place tray in position (air conditioning pipe may need to be moved)

Place M8 bolt into captive below air conditioning pipe

Replace bolt through bottom bracket into guard

Place two M6 bolts in upper bracket into captives

IF AUTO FOLLOW AUTO INSTRUCTIONS

Place battery in tray

Line up top mount and drill hole in radiator support

Fit M6 bolt nut through this hole

RECOMMENDED ISOLATOR

DBE140SF or DBE180-SX Ensure, before closing the bonnet that all items fitted have adequate clearance

Nov 2017