

FITTING INSTRUCTIONS

PART NUMBER: T2T578



Toyota Tarago - 02/2006 – on
Towing Capacity 1200 Kg / Ball Load 120 Kg
Lug # L264

- 1) Remove bumper by removing 1x screw from wheel arch on both sides.
- 2) Open boot and remove 1x bolt from each side.
- 3) Remove 5x plastic clips from underside of bumper.
- 4) Gently peel bumper away from wheel arches on both sides and remove bumper.
- 5) Remove hardware from the tow bar and offer to vehicle. Loosely fit 1x bolt on both sides then fit all three on exhaust side first then repeat on other side. Tighten all bolts.
- 6) Mark out bumper as per diagram.


ECU MUST BE FITTED WITH THIS TOW BAR.
ECU SOLD SEPARATELY.



FITTING INSTRUCTIONS


PART NUMBER: T2T578

TAGTM
TOWBARS

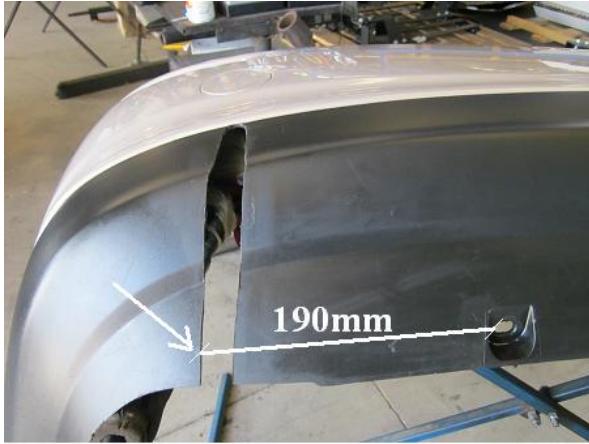


drivers side

mark out, then draw straight line between marks, then mark 25mm towards center

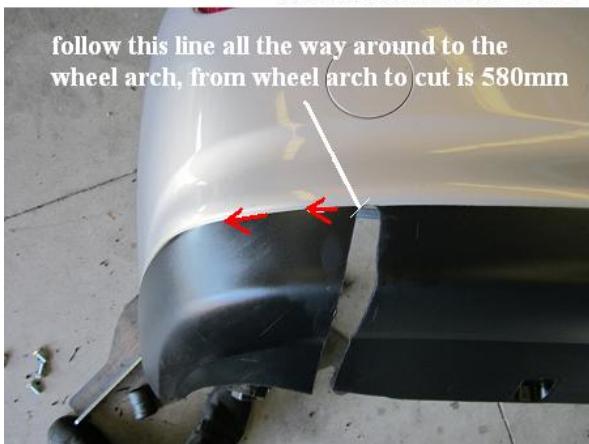

passanger side

mark out, then draw straight line between marks, then mark 25mm towards center

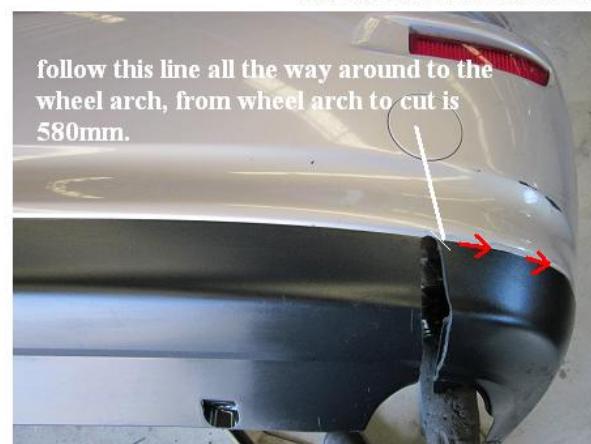

RECOMMENDED ASSEMBLY
TORQUE LISTING

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>	<u>Nm</u>
M6		9.5
M8		21.7
M10		43.4
M12		77.3
M16		189.8

MIKANO
INDUSTRIES

PROUDLY MANUFACTURING TOWBARS IN AUSTRALIA