



INSTALLATION OF 'OUTBACK' ROOF CONSOLE

MAZDA BT-50/FORD RANGER PX DUAL CAB 2012 on

PART NO. RCMA12

PART NO. RCPXMK2

NOTICE: A cut-out into the roof lining will need to be made to mount this console, thereby making installation a permanent fixture.

Removing Light Pod assembly will also remove the Perimeter alarm sensor fitted. Perimeter alarm can be detached from light pod assembly and re-fitted to console. See Perimeter Sensor fitting supplement if you wish to transfer to console.

Failure to connect coloured wiring correctly and to tape up all connections as described in following instructions may result in an electrical short and will void console warranty.



For this installation, you will need an electric or battery drill, 3.2mm drill bit, one stumpy and one long thin Phillips screwdriver, sharp thin bladed craft knife or similar, marking pen or pencil, Loctite or similar thread lock and electrical insulation tape. All mounting brackets and hardware supplied in fit kit.

Vehicle Preparation:

Unclip front interior light assembly from Pod Surround with thin bladed screwdriver or similar placed in the centre on the front edge, and gently prise from Pod. Unplug all wires. Remove two screws that hold light pod surround to roof rib, and gently prise from roof lining, working from rear view mirror back. Set aside with light assembly for future re-installation.

Gently prise out Bluetooth Speaker from Pod assembly and place in position over R/H speaker Grille inside console and fix into circular sticky foam tape supplied. Clean surface of console with white spirits or similar before sticking down foam circle.

Point wire connector from Bluetooth Speaker upwards towards Bluetooth connector on wiring loom. Stick down other foam tape supplied firmly over speaker to hold in place.

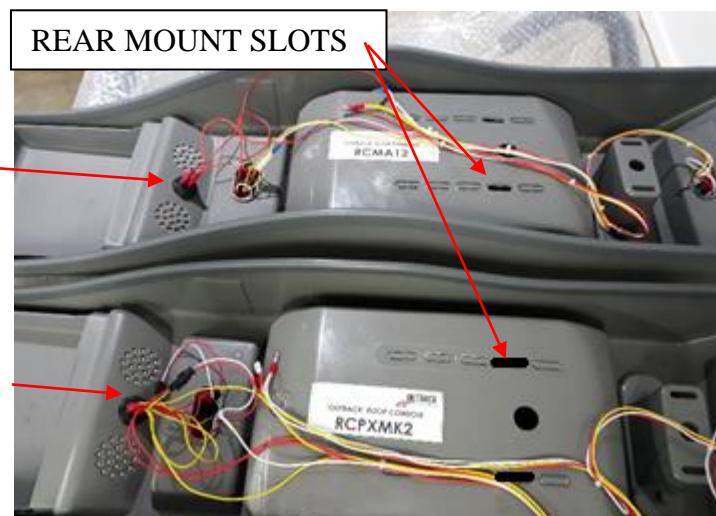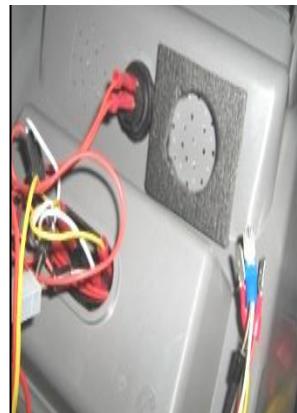

Red loom standard
(RCMA12)

Yellow loom upgrade
(RCPXMK2)

Front Mounting Bracket installation:

Fasten Front Mounting Bracket supplied to light pod mounting holes using two (2) 10g x 20 Phillips screws supplied. Add a drop of Loctite to both threads.



Rear Mounting Bracket installation:

To install Mounting Bracket to roof rib, hold console marking template against Front Mounting Bracket with slot **580mm** rearward of Front Mounting Bracket. Centre template in middle of vehicle, clamp template to Front Mounting bracket, mark through slot in template



Use sharp craft knife and neatly cut out roof lining to expose roof rib.



Hold Rear Mounting Bracket in place against roof rib. Align centre hole in bracket with small hole in roof rib. Push scribe or similar through the two captive nuts and place marks onto roof rib. Remove bracket. Using a short "stubby" **3.2mm** drill bit and with only 20mm of drill bit protruding from drill chuck, drill two 3.2mm holes into roof rib. Mount rear bracket to roof rib using **two (2) 10g x 20** screws supplied, using a thin Phillips head screw driver inserted through the captive nuts to tighten. Add a drop of Loctite to both threads.



NOTE: Switch centre interior light to **OFF** position. Console will cover interior light and will no longer be needed.

Comfortable work position;

Shift front seats all way back. Lay front seats back. If left handed sit in right hand front seat. If right handed sit in left hand front seat. A second person will aid to your installation.


Installation preparation:

Cover vehicle floor console and dashboard with protective sheet and stand console upright against dash.

Plug console wiring loom into **front interior wiring of vehicle**.

All Early Models: Plug **Red** wire on console into individual


Yellow wire of interior light plug. Plug **White** wire on console into **White/red wire** of interior light plug, and **Yellow** wire on console into **Black wire** of interior light plug.

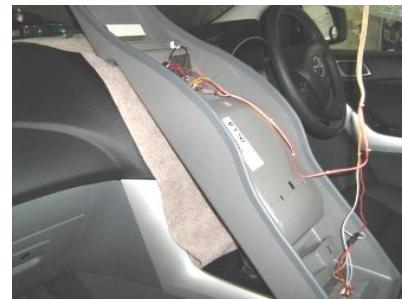

***PX Mk II Model Upgrade only:** Plug **Red** wire on console to **Yellow/green** individual interior light plug, **Yellow wire** into **Blue/black** interior light plug, and **White** wire into **White/red** interior light plug.

BT50 Model Upgrade only: Plug **Red** wire on console to **Yellow/Purple** individual interior light plug, **Yellow** wire into **Black**, and **White** wire into **White/brown** plug.

Check the console lights work independently once doors are shut and timer switches off, then tape up to ensure wires do not become disconnected.

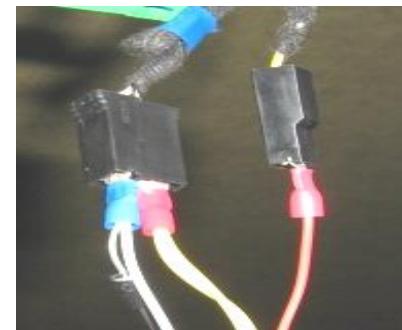

There is an **ON/OFF** switch located above the radio opening, forward of front lights. When **OFF** it acts as a “kill” switch: **no lights will work**. When **ON**, LED lights work independently on their own switch as map/interior lights when doors are shut and door timer has switched itself off. When doors are opened, all lights will operate as door/interior lights.

Console installation

Hold console up in position against roof and loosely screw through two (2) holes on front of console into mounting bracket using 6 x 16mm black headed screws. Use two (2) 6mm x 30mm round head Phillips bolt and flat washers and fasten into threaded insert in Rear Fixing Plate **from within the locker box**. Now tighten all round head bolts, starting from the front. NOTE: only tighten rear bolts up so **console fits snug to curvature of roof lining**. Connect Bluetooth speaker wire to vehicle loom connector via the radio hole opening.

Remove Microphone cable holder and rear mount cover panel from inside Locker Box. Fasten rear cover panel in place using screws provided. Fasten Microphone cable holder to side of console as per radio installation instructions.



RCMA12 FIT KIT

One (1) Front Mounting Bracket

One (1) Rear Mounting Bracket

One (1) Marking Template

One (1) Piece sticky back foam with hole (Bluetooth speaker mount base)

One (1) Piece sticky back foam with slot. (Bluetooth speaker top)

Two (2) 6mm x 25mm round Phillips head bolts

Two (2) 6mm large washers

Two (2) 6mm x 16mm black round Phillips head bolts

Four (4) 10# x 20mm Phillips head self-tapper screws

Three (3) x 100mm Sticky back foam pieces (CB mount)

RADIO INSTALLATION

Radio Insert Installation: for smaller size radios

Decorative side of insert faces outwards and snaps out over bottom of tray surround.

To install insert, squeeze top and bottom together; push/bend sides and squeeze into tray surround from inside to outside until bottom lip on decorative side of insert snaps/pops out over bottom of tray surround, prize with fingers to ensure bottom lip of insert is in place over tray surround as described. **Do not** scratch or mark insert or surround by prising/levering with tools; use hands/fingers only.



Radio Installation:

Place protective cover on work bench to avoid scratching console.

Place console on protective cover and using a sharp knife cut a 30mm x 100mm section out of storage tray 25mm in from where rear of radio will be when installed. Use a small amount of methylated spirits on a clean cloth to clean exposed part of console and bottom rear of radio.



Peel one side of protective backing from foam strip supplied; apply pressure with palm of hand to adhere foam to exposed part of console. Peel backing off other side of foam strip and add one or more strips of foam to suit different size radios (see chart below). This will keep radio level with bottom of surround.



Insert radio on an angle until radio protrudes 15mm out over bottom of tray surround or insert and straighten; lay flat onto sticky back foam and apply firm pressure to top of radio with palm of hand for 30 seconds to ensure good adhesion.



Sticky back foam chart:

One (1) strip- standard size radios

Two (2) strips- Icom and Uniden

Three (3) strips- GME Electrophone

Microphone and Microphone Cable Holder installation:

Install in a position that suits best, depending on vehicle and Radio model. Ensure microphone **or** microphone cable and holder does not foul on sun visor when pulled down.



Microphone clip on slight angle



Left hand cable outlet radios



Microphone clip on acute angle