


Outback Accessories Australia

Part No. XRPAT Xrox® Bar

Nissan Pathfinder May 95 – June 05

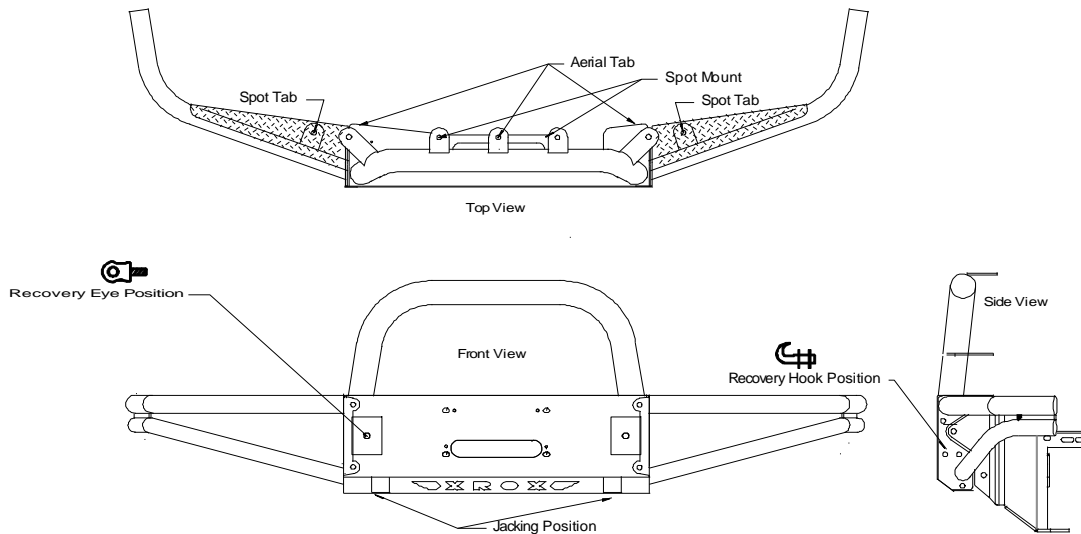


Description

This bar has detachable side wings that can be replaced if damaged; plus 6 spot tabs, 3 aerial tabs, 2 jacking positions, 2 recovery eye and 2 hook locations. (Recovery eyes & hooks are not provided in this kit). The bar has been developed to accept up to a 12,000Lb. Warn low mount winch.

This bar & fitting kit is certified as being compatible with the Air Bag system of this vehicle. The airbag sticker is to be attached to the top side of the centre section of the bumper pressing. The vehicle make and model needs to be marked on the sticker with a permanent marker after it has been attached to the bar.

Fitting Instructions


1. Remove the front grille (plastic clips) then remove the bumper, bumper support crossmember and crash cans from vehicle. Once the bumper is removed, refit the front grille. Remove factory tow hooks.
2. Fit the mounts to the vehicle chassis:

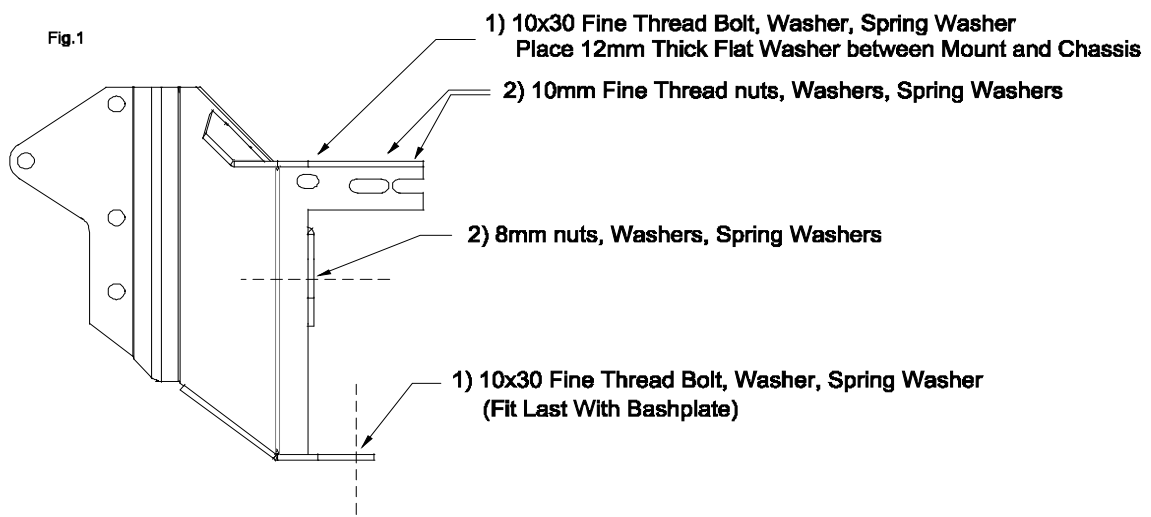

Slide the mount on from the side, then push the mount onto the 8mm captive bolts. Fit and tighten all the nuts and bolts illustrated in fig.1. A 12mm thick flat washer must be fitted between the top of the mount and chassis, where the 10x30 fine thread bolt is fitted. Loosely fit the bottom 10x30 fine thread bolt.

3. Fit the tow hook and washer bottle/air box covers:




Fig.2

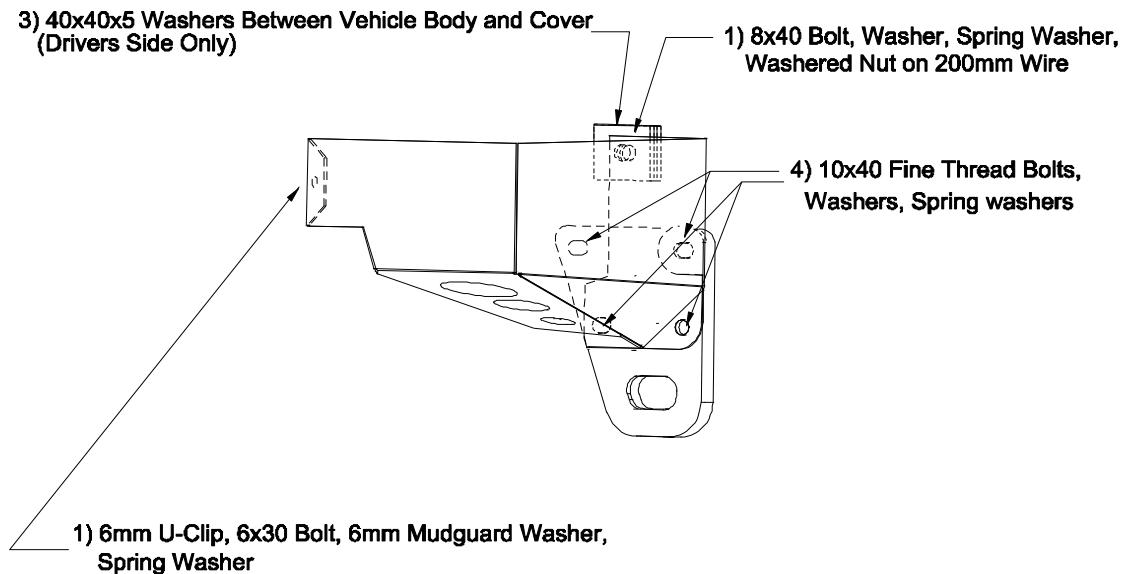

Fit the tow hook to 4) captive nuts located on the driver's side chassis rail using 4) 10x40 fine thread bolts, washers and spring washers. Tighten the top two bolts only. Now fit the driver's side washer bottle cover utilising the bottom 2) bolts. Tighten. When fastening the top hole, slide 3) 40x40x5 washers between the cover and chassis. Use an 8x40 bolt, washer, spring washer and 1) washered nut welded on 200mm wire, accessing the inside of the chassis through the Xrox mount. Fit the air box cover to the passenger side using 1) 10x30 fine thread bolt, washer spring washer and 1) 8x30 bolt, washer, spring washer and 8mm washered nut on 200mm wire.

4. Fasten the plastic mud guards to the tabs located on the back of the washer bottle and air box covers. Use an M6 U- clip on the tab, make a hole in the mud guard then fasten it with a 6x30 bolt, 6mm mudguard washer and spring washer. Trim the plastic mudguards to suit – notch the top to fit around the Xrox wings.
5. Press the tube inserts into the ends of the wings. Use sikaflex or similar sealant to create watertight seal, then assemble the side tube wings to the bar centre. 4) M10 bolts, flat washers, s/washers, nuts, 2) M12 button head allen bolts **per side** are used to bolt the front of the side wing to the centre.
6. Fit the assembled tube bar to the mounts and align the bar to the vehicle. 4) M12 bolts, hardened flat washers, s/washers and nuts **per side**. Tighten all bolts.
7. Fit the bashplate (ID: PAT) to the front crossmember with 2) 10x30 fine thread bolts, previously fitted loosely to the mounts. Fasten the remaining 2) holes to the vehicle mounts using 2) 10x25 bolts, washers, spring washers and nuts.
8. Fit the number plate with the existing screws.

Kit Contents

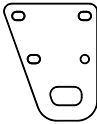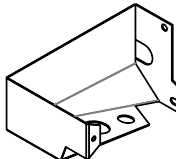Quantity	Description	Quantity	Description
1	XROX Bar Centre (C01)	16	12mm Spring Washers
1	XROX Side Wing R/H (29)	4	10x40 1.25 Fine Thread Bolts
1	XROX Side Wing L/H (30)	5	10x30 1.25 Fine Thread Bolts
2	XROX Mounts 1) Left & 1) Right ID: PAT DWG# XRPAT-2	10	10x25 Bolts
1	Front Bashplate ID: PAT DWG# XRPAT-3 	10	10mm Nuts
1	Tow Hook (DWG# XRPAT-7) 	4	10mm 1.25 Fine Thread Nuts
2	Washer Bottle/ Air box Guards 1) Left and 1) Right (ID: PAT DWG# XRPAT-6) 	28	10mm Hard Washers
2	8mm Washered Nuts with 200mm Wire Welded	23	10mm Spring Washers
3	40x40x5 Washers	2	8x40 Bolts
2	Plastic Tube Inserts 48mm (ID 42mm)	4	8mm Nuts
2	Plastic Tube Inserts 42mm (ID 36mm)	6	8mm Washers
1	Air Bag Protection Sticker	6	8mm Spring Washers
4	12x40mm button head allan bolts	2	6mm U-Clips
12	12x30 Bolts	2	6mm Spring Washers
16	12mm Nuts	2	6mm Mudguard Washers
16	12mm Washers	2	6x25 Bolts
18	12mm Thick Flat Washers	1	Fitting Instructions
Kit Packed by:		Checked By:	
		Date:	